




Echo 123

Ver 1.3.0

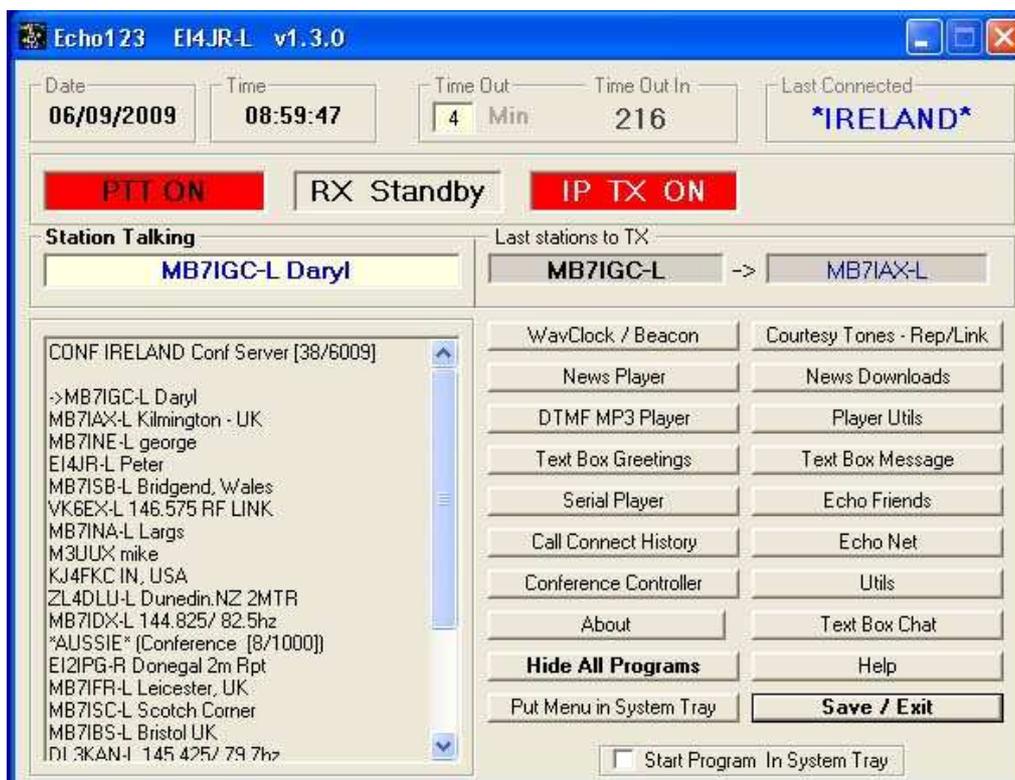

[Download Echo123 Ver 1.3.0](#)

Windows XP Application No registration need Free to use

NO TTS Required all announcements done with audio files

Echo123 is a simple to use Windows XP utility for Sysop/Owner of a Repeater / Link or Conference. Requests for a none TTS functions with all the announcements has been requested are now have done with audio files in either MP3 or WAV. There are many tools in this program that will assist you. Audio file Clock & Beacons. Courtesy tones using CW or Audio files with effects. Friend listing with auto connect options. Internet options with auto QRZ lookup for connecting stations, Text Box Greetings for connecting stations. DTMF audio player can be used for Help or information audio files. News Player, Download and play the news to your RF users all automatically. Hold text conversations with stations that can not speak your language with the Language Translator option. Sysop / Admin Conference Controller option. Make and add your own audio files personalized to your own needs. Serial Player, Text Box Messages. Simple Repeater logic using your sound card. Parrot Function Use your link as a parrot repeater. This program runs along side the EchoLink program.

A BIG Thank You to Jonathan K1RFD for providing [EchoLink](#). Without it this program Echo123 would not have been possible. The [EchoLink](#) program is provided FREE as is the Echo123 add-on.

Initial Setup

Download the Echo123.zip software into a directory unzip the software (4 files) and Run Setup
C:\Program Files\Echo123\ is where the program places its files

24 hour PC Clock

Make sure your Windows clock is on 24 hour time. To do this, go to the Windows control panel, make sure it is in "Classic View" and choose "Region and Language Options." Then, click Customize. Choose the tab labelled "Time." Under the Time Format pull-down menu, choose "HH:mm:ss." Click OK, Then OK again, and Windows should now be showing the time in 24 hour format.


One more important note

We are sorry to report that this program is not compatible with EchoTime (another fantastic [EchoLink](#) Add-on), so please deactivate EchoTime before attempting to use this software or if you do wish to use the EchoTime program deactivate EchoProducer as you cant run both.



Icon in the system tray

EchoWavClock

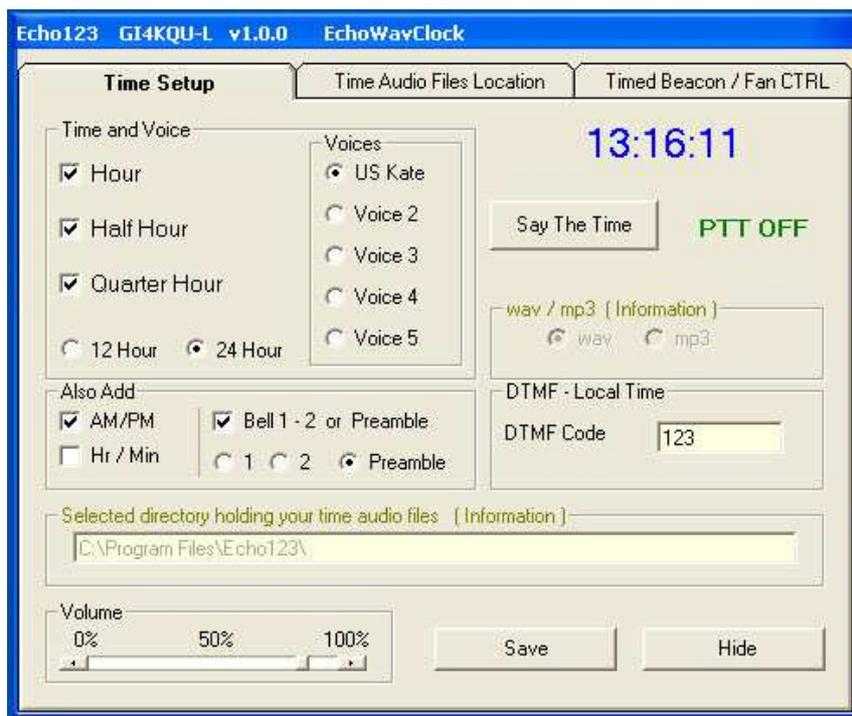

A Clock that doesn't need a speech engine

Setup

Say The Time

Select the time period that you wish the time to be transmitted to your users. Hourly, Half Hourly or Quarter to or past the Hour. If the node is in use the time will not play as not to interfere with any QSO that is in progress.

Voices

Your program comes with 1 voice (US Kate) installed (C:\Program Files\Echo123\). You can install other voices if you want the full package of voices. When installed the Voice options become available. See below for more free voices. When

you 1st run the program the first voice is automatically set for you. To select the other voices you must 1st install voice.

Put your own pre done voice files or one of the selection below into directory of your choice, as an example **C:\My Voices\Other** don't miss any files as the program when it cant find any of the files in your directory will revert back to the default voice 1 (US_Kate).

WAV / MP3

This indicates the type of file the program is set to play. To change to wav or mp3 see next section

Bell 1/2 or Preamble

This when ticked will enable you to use any one of the 2 Ding Dong bells at the start of the transmitted time or the Preamble voice saying at the start of the time (Good Morning , Good Afternoon and Good Evening).


Volume

The volume level can be set for your clock. This is an independent volume control and will not effect your normal audio settings set for your link. This volume controls both the Clock and the Beacon audio file

DTMF

The time can be called using DTMF set by you to enable your RF users who cant afford a watch. If you do not wish this to be active simply put an "X" as the code.

Extra Clock Voices can be found at the bottom of this section for you to download and use.

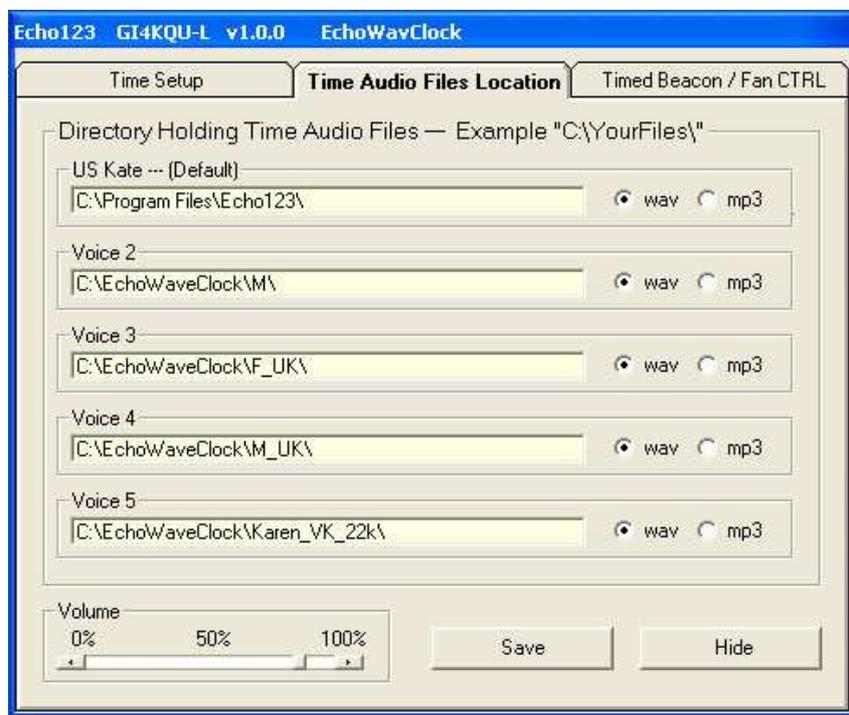

Directory holding your audio files

Enter the directory location in one of the fields where you put your audio files as an example **C:\EchoMyFiles** Don't forget the slash at the end

WAV / MP3

This enables you to have either wav or mp3 file for your own files .wav or mp3 can be changed at any time. You must select the correct one for your audio file.

Where are the voices and can I play

Oh Yes you can play here no problem. The Directories for the audio files can be put where ever you want them. The default directory when you 1st load the program is located at located at **C:\Program Files\Echo123** Here you will find the audio files I have made to start you off. You must have the same amount of files in your directories when you start to have a play.

The good thing is that you can make your own audio files and replace the ones that I have made to suit your needs of voices or languages


Here is a list of Clock files you need (wav or mp3)

TheTimeIs.wav = "The Time Is"
 GoodMorning.wav = "Good Morning"
 GoodAfternoon.wav = "Good Afternoon"
 GoodEvening.wav = "Good Evening"
 DingDong.wav = The sound of a Ding Dong door bell
 DingDong2.wav = The sound of a Chime Door Bell
 Blank.wav = This must be left as a blank audio file
 Hour.wav = "Hours"
 Minutes.wav = "Minutes"
 AM.wav = "A M"
 PM.wav = "P M"
 00.wav = "0 0" or "Zero Zero"
 01.wav = "0 1" or "Zero One"
 All the way to
 59.wav = "59"

You could possibly change TheTimeIs.wav = " The time here in Donegal on the EI2DXR repeater is " I'm sure you will customise it to your needs.

You could change the AM & PM.wav = " A M . . E I 2 D X R Repeater, Located Donegal Ireland, Link : On." Do the same with the PM.Wav (Note the semicolons commas and full stops a when using a text to speech converter they add pauses for you)

A good place to play with TTS (Text to Speech) that is free and perfect for the clock is. <http://www.naturalvoices.att.com/demos/> or <http://www.research.att.com/~ttsweb/tts/demo.php> . You will find the voices that I have used there. The sample rate that I used was 16 k. (Kate 16) It doesn't matter what quality that you use as the player should handle it no problem. Keep in mind the bigger the file the slower it might get.

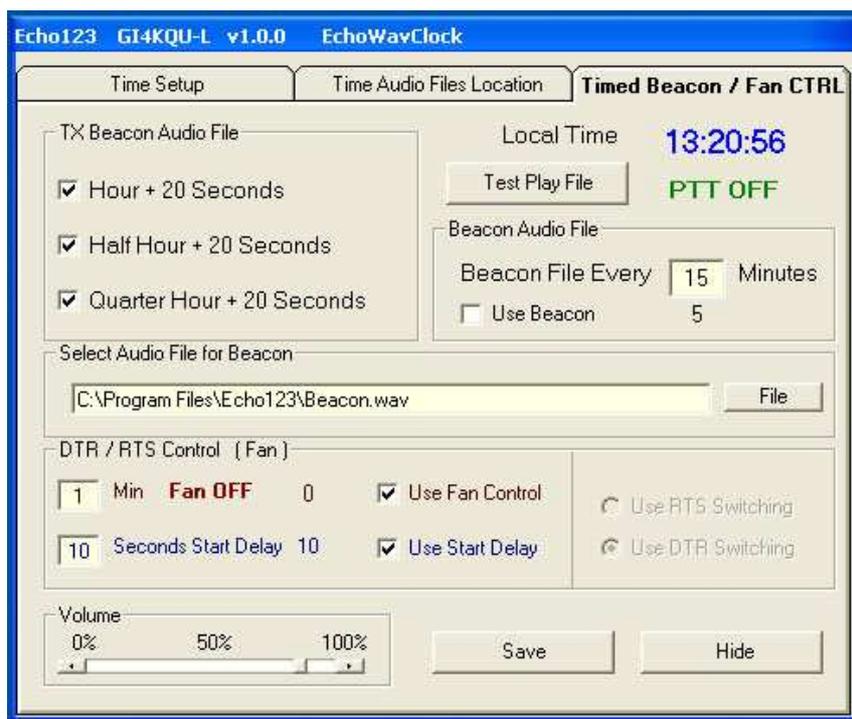

Beacon on the hour

You can select to play a beacon audio file (MP3 / WAV) that you have made every Hour, Half or quarter. The file will play 20 seconds after the hour as to allow the time to finish playing. If the node is in use the file will not be played

Beacon every XX minutes

The beacon can be set to beacon the audio file to how many seconds you set.

File

You can select the file that you wish to be your beacon. MP3 / Wav. Other audio formats will work as well.

FAN control

RTS / DTR can be selected only when the Use Fan Control is de selected.

Enter the fan control ON time. This is the time when the fan starts and runs until the count down timer reach 0 then stops. When selected and delay time entered will delay the start of the fan period. This is to stop the fan starting for a very short transmission.


Volume

This control is shared with the clock function

Make your own Wav Files with the Text to Wav Converter Program [Click Here](#) You need Text to speech installed or on line with <http://www.naturalvoices.att.com/demos/> or <http://www.research.att.com/~ttsweb/tts/demo.php>.

Users own voice sets sent in to me will be put here so check regularly

Audio File Downloads	Comments	Submitted By
US Kate	22k 16 bit mono (Comes with program) .wav	EI4JR
US Paul	22k 16 bit mono US Male .wav	EI4JR
UK Audrey	16k 16 bit mono UK Female .wav	EI4JR
UK Charles	16k 16 bit mono UK Male .wav	EI4JR
VK Karen	22k 16 bit mono Aussie Voice .wav	VK2EX
EA Rosa	16k 16 bit mono Español Voice .wav	EA8CDT
EA Rosa	16k 16 bit mono Español Voice .mp3	EA8CDT

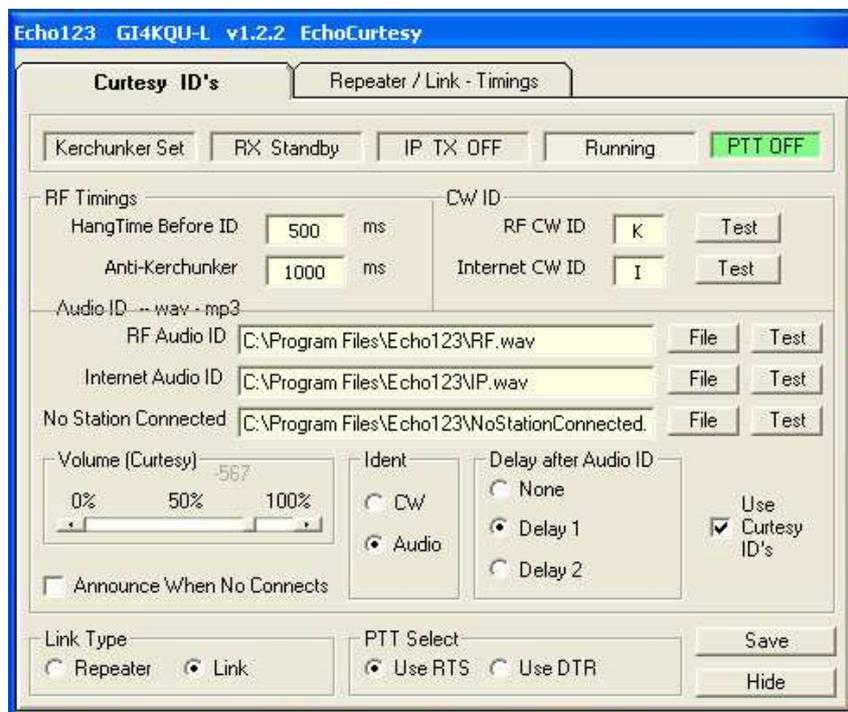

Curtesy Tones

EchoCurtesy is a simple to use application to add a courtesy tone to the end of the all transmissions.

You have the option to send your courtesy tone using pre made audio files in wav / mp3 or sending in the usual way with CW. Hang time before ID, Anti-Kerchunker, Send different CW idents for RF traffic and IP. Send different audio file tones for RF and IP traffic. Option to tell RF station using your link that there are no stations currently connected. Indicators showing the state of the program. Volume control for the audio files that will not effect the audio settings of your node.

Audio speed control. Make your own audio files and use them with this program.

Hang Time before ID

Enter the hang time that you wish to use before the CW / Audio Ident is Transmitted (500 ms Default)

Anti-Kerchunker

This option will help against the phantom RF user who keys the mic for a second just to get e put a delay before the CW / Audio ident

CW Ident

RF CW ID and Internet CW ID letter are entered here.

The option here enables you to select different letters for the curtesy (internet or RF users.) The speed and volume of the CW can be altered with the EchoLink program in the usual way (Tools - Sysop Settings - Ident - settings)

Audio Ident

RF Audio ID and Internet Audio ID audio indicator file names are held here. These are normally "beep boop" type sounds. Different sounds can be selected for Internet & RF end of over's. I'm sure will have fun playing with different sounds until you find the one suitable. There are file loading and test buttons.

No Connections

This when ticked will inform your RF users that there are no stations connected to you node. This option is useful as a connected station might disconnect during an RF users over.

Volume

This volume control sets the audio level and is independent to the EchoLink audio

CW - Audio

Simply select the type of curtesy ident that you wish to use.

Anti Squelch Delay

There are 3 settings here - "None" for no delay. Anti Squelch 1 / 2 simply adds a bit more PTT to the end of the curtesy tone as some Links / Repeater have a long squelch tale and cuts off the tone.

Save

This button will save all your changes to any of the fields.

Where are the Tones and can I play

Oh Yes you can play here no problem. The Directories for the audio files can be put where ever you want them. The default directory when you 1st load the program is located at located at C:\Program Files\Echo123\ Here you will find the audio files I have made to start you off. You must have the same amount of files in your directories when you start to have a play.

The good thing is that you can make your own audio files and replace the ones that I have made to suit your needs

Here is a list of Curtesy files you need (wav or mp3)

RF.wav = " Tone 1"

IP.wav = "Tone 2"

NoStationsConnected.wav = "There are no stations currently connected"

Link Type


Repeater or Link operation is to be selected here.

PTT select

Select the RTS or DTR that you are using to control the PTT on your radio.

Setting up computer for use in Repeater Mode.

Setting up in Repeater mode is a little different than a link as you will be using both Mic In and Audio out on your sound card. You must set up your sound card configuration 1st in record and select the Mic also in the playback section of the audio set up select Mic again. What happens here now is that when audio is sent to the mic input the audio is also passed through to the audio out. Audio levels will need to be set up as usual. The program controls the PTT and enables you to use the computer as a simple logic with all the bells and whistles of the link operation. I'm sure different sound cards will achieve the same outcome and I would be interested in what you have done with your system. This configuration works well for me.

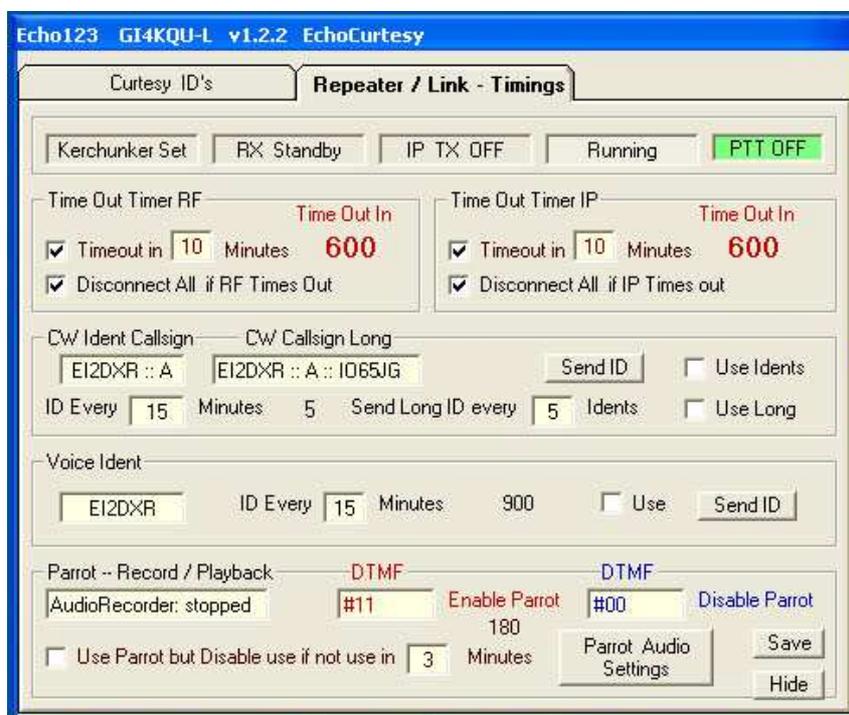

Repeater / Link - Timings

Time out timers

These options control the TX and RX time outs. There is an option that will disconnect all stations on time out. if not ticked a simple warning is sent to the RF user. The time out option is available for both Repeater and Link operation. When in repeater mode if the user times out the audio and PTT retransmitted is cut and a warning that you have timed out once the rag chewer stops talking.

CW Idents

EchoLink has its own CW ident option I just found it more convenient having it to hand in the program. Short call is simply your call sign and maybe a CTCSS letter indicator as shown above the ":" (Colon) simply as a little delay before sending the CTCSS letter in CW.. The Ident can be set to your desired time in minutes. The long callsign field is an easy way to send a longer CW ident containing maybe your call CTCSS code and locator as shown in the picture above. Idents will be suppressed is the system is in use.

Voice Ident

EchoLink has its own Voice Ident and again as above I found it convenient to have it at hand. Simply enter your link / repeater callsign and the desired time interval. Idents will be suppressed is the system is in use.

Parrot - Record / Playback

The parrot function can only be enabled when in Link mode. This enables you to talk into the link and record your voice. As soon as you drop carrier your recorded voice will be played back. This can be useful if there are 2 simplex stations not in range of each other but both can work the link. The Parrot will revert to normal link operation as soon as the time set has been reached. Any EchoBuddy you have selected for auto connect will be suppressed until normal operation is restored. There is an option to Enable / Disable the parrot function with DTMF this will normally operate as long as it is being used or turned off with DTMF or timed out. When the parrot option is enabled all stations connected will be disconnected and the link will be shown as busy on the EchoLink system until the link operation is restored. When Repeater is selected this option is disabled and greyed out.

Parrot Audio Settings




Select the best setting for your sound card (recording) I have found the above to be the best for my sound card. Yours may differ.

Echo Chat



EchoChat

This option uses the EchoLink text box facility but in a more fun graphical way. Messages can be sent to other nodes that are connected to you or the conference you are connected to. Simply enter your message to send and either press the enter key or click on the send button.

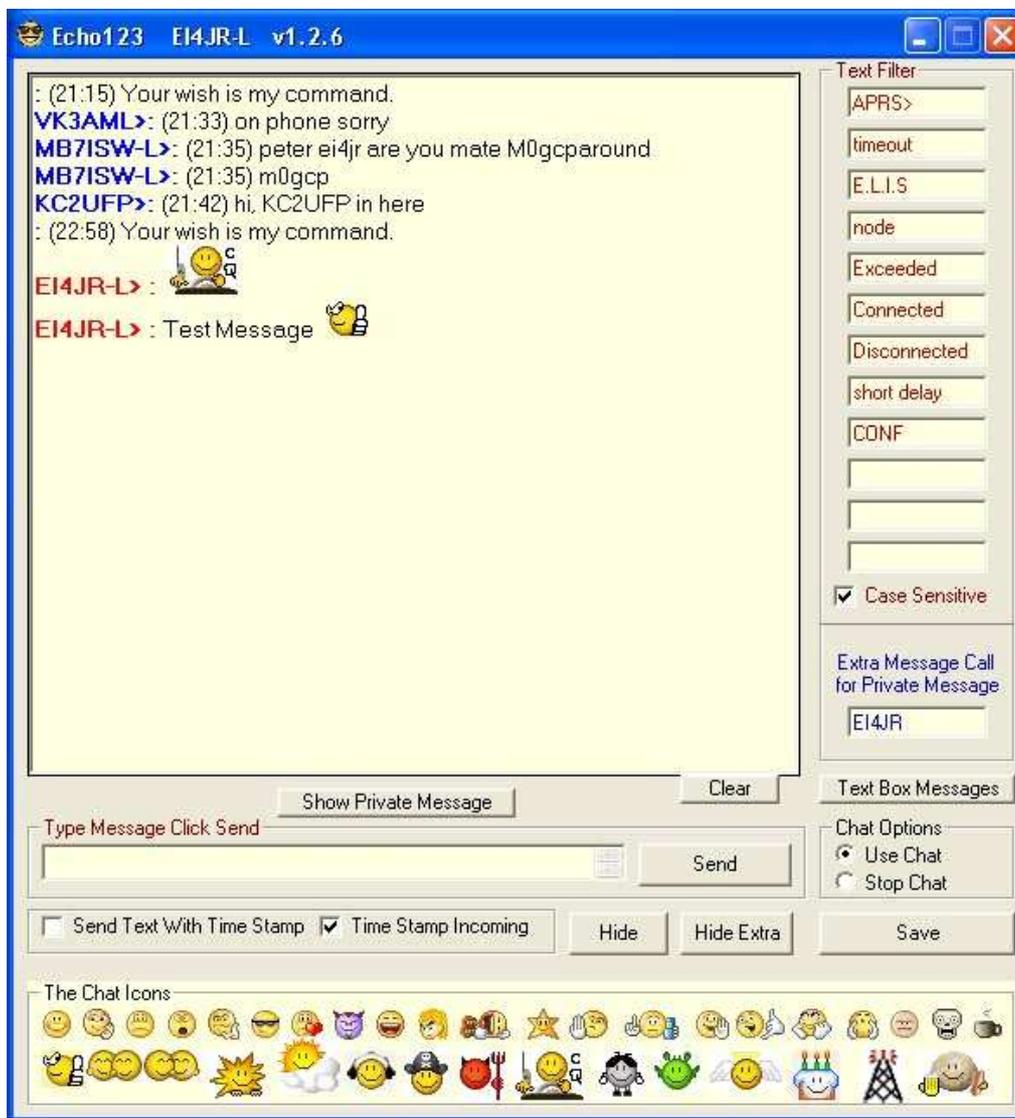

Hide Extra Button

The Hide Extra button will reveal or hide some extra tools that you can use in your chat box.

Text Filter

Entre a words into one of the filter boxes that would be in a sentence that would appear in your text box. If the word is detected then the complete sentence is not displayed in the text box. This option is not case sensitive

Case Sensitive

This option when ticked will make the filter word case sensitive. When not ticked all filter words upper or lower case messages will filtered

Extra Message Call

This option enables you to add a 2nd callsign that can be used for messages, This is useful as senders of messages forget to add the -L or -R to some of the callsigns so having an alternate call helps stop this problem. Sometime your call is different to your node callsign so this option enables you to put your own call as the extra message callsign.

Smiley's

Here you can add smiley's to your text. Only stations that are running the EchoChat text box will see the smiley pictures. To select a smiley simply hover over the picture that you wish to add to your text message and either click on the picture or wait for the tool tip as it will show the key press that you would need to enter.

Some other smiley's that are not shown are :loo - :beer - :skull - :xmas - :monk - :PeterEI4JR

Time stamp

You can select to time stamp messages that are received or transmitted

Text Box messages


This option is shown below



Private Message

This section is a text only option where you can send a messages to a node that is connected directly or a conference that you are connected to. Simply enter the callsign and any extensions like -L or -R, Type your message and click on send when finished. If the station receives your message you will get and acknowledgment message back saying Message Received. If the station is on line and connected to the system that you are connected to then they will get the message. If you get no acknowledgment then they will not have had the message put in there Private Message box. The private message box will automatically open if you receive a message

=====

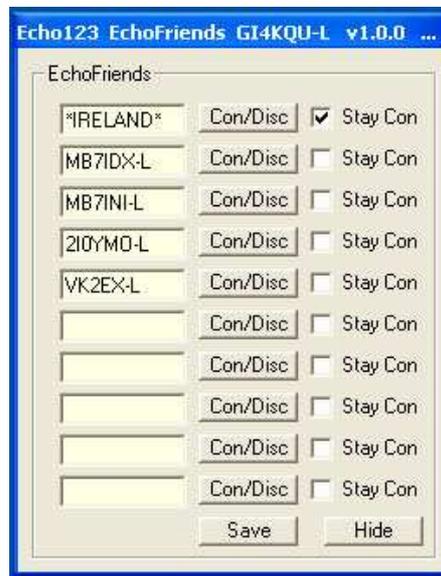

EchoFriends

This is a handy option that enables you to store some of your Echo Friends.

Con/Disc


Clicking this button simply connects or disconnects the selected Echo Friend

Stay Con

When ticked the selected Echo Friend will automatically connect. I have put a delay here this delay can be up to 45 seconds before the connection is made. During the news file playing when stations are disconnected your Echo Friend will not connect until the news has finished.

Save

Saves your amended data

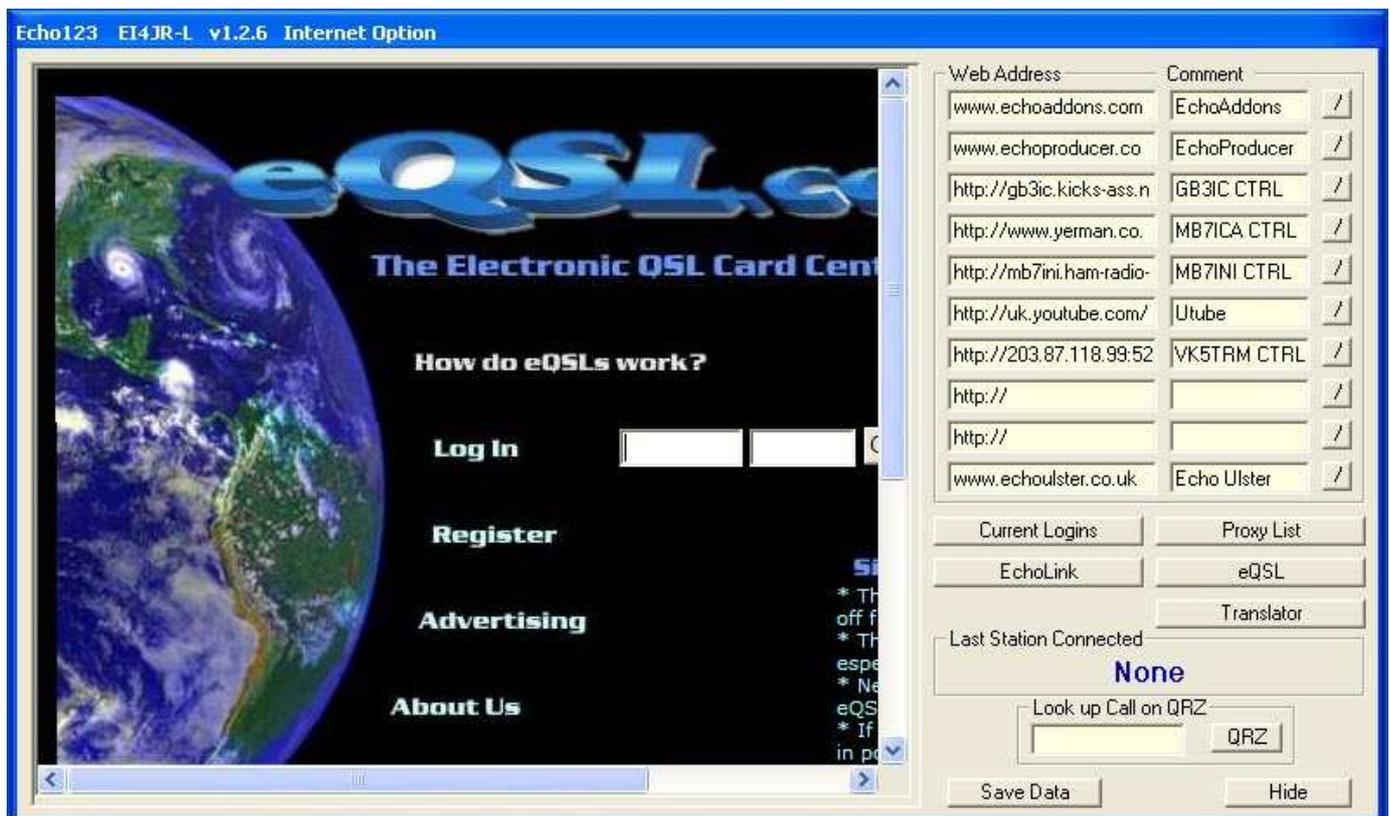

Internet Option

This screen is a small internet window that enables you access to some of the useful web sites. This window can be expanded
 Net control is accessible from the conference controller and the main menu. This option enables admin for remote nodes to access them from this panel. Simply add the URL and a comment as shown above. I have added a QRZ lookup Auto and manual , Current Logins, Proxy List, EchoLink , Translator and eQSL buttons. This panel is sizable.

Look up call on QRZ

This option enables you to look up a call sign on the QRZ web site. Simply enter the call and click on the QRZ button.

Last Connected Node

This will display the last station connected and there name.

Translator

This will take you to the Babel Fish web site enabling you to use there text translator.

Current logins

When this button is clicked it will take you to the [EchoLink](#) current log in screens

Proxy List


This button will enable you to see the current list of public proxies that are available.

EchoLink

This button will take you to the [EchoLink](#) web site.

eQSL

This button will take you to the eQSL web site. This web site enables you to send and receive QSL eCards

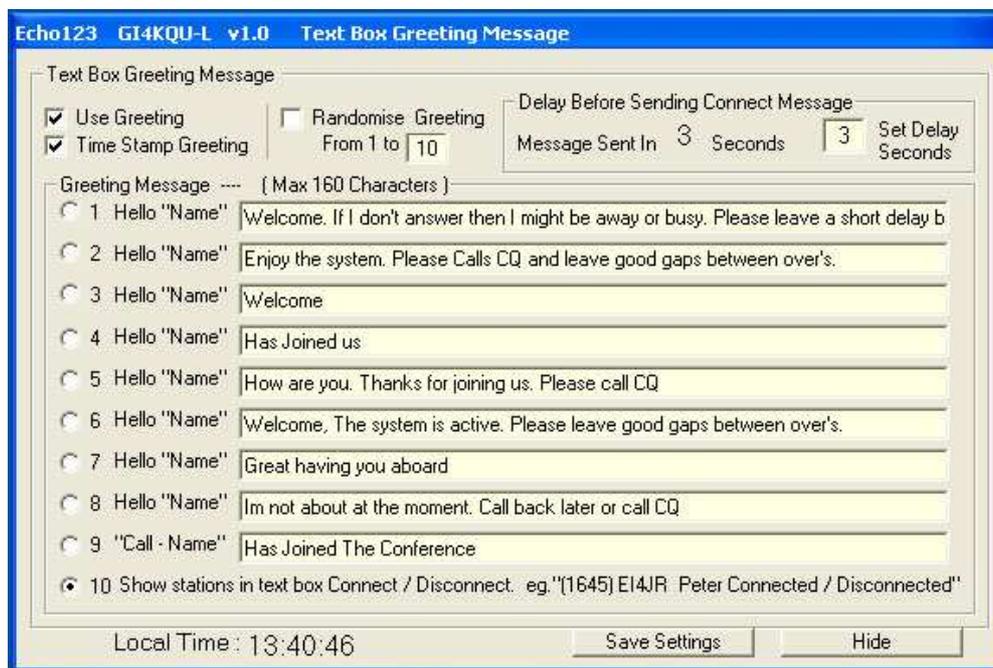

Text Box Greetings

Time Stamping

When this option is ticked your Text Box Messages will be time stamped.

Greeting Messages

This option enables you to automatically send greeting messages to stations connecting to your node. Select the message that you want sent on the connection of a station to you node. Messages can be up to 160 characters. Messages 1 to 9 can be amended and saved. Message 10 simply says a station as connected or disconnected.

Volume

This volume control sets the audio level and is independent to the EchoLink audio

Save

Saves any changed data



News Player

If you play the news for your RF users then you will be happy with this option as it will play a news file at predetermined days and times

Audio File

Enter the path you the news file that you want to select for your news

Day of the week

Select the day or days that you want your news to be transmitted

Time

Enter the time or times that you wish your news to be transmitted. If only one time section is required simply enter 99 in the time fields that are not required.

File

Clicking this button enables you to select a file that you wish to transmit

Play

When clicked plays the selected Audio file

Stop

Stops any playing Audio File

Audio File 1,2,3 as Beacon

Each of the Audio files can be used as a beacon if selected. Enter the beacon time in minutes and at the end of the countdown the selected file it will be played. If your node is in use the file will not be played. The node Status functions will not operate when file is being played as a beacon (Disconnect all, Node Busy or Warning).

Volume

This volume control sets the audio level and is independent to the EchoLink audio

Node Status

There are 2 options here that I recommend using while playing the news.

Disconnect All Before Playing File

Disconnect All Before Playing File option when ticked disconnect all connected station including any auto connect Echo Friends. Echo Friends will reconnect when the news file has finished playing. Disconnecting all connected station is good practice as you don't want internet traffic calling CQ or holding a QSO while the news is being transmitted.

Set The Node Busy During File TX

This option when ticked will show your node as busy and stop stations connecting to you during the news audio file playing as you don't want internet traffic calling CQ or holding a QSO while the news is being transmitted.

Warn 1 Minute Before Disconnecting for Local news

When ticked a text message also an audio message to the RF users that the news will be read out in 1 minutes time.

Text Message Reads "<1> Minute Warning Auto Disconnect for Local News."

I have also made a wave File that says the same C:\Program Files\Echo123\WarnNews.wav

At the end of the news there is an wave file that says "End of local news. Link On" C:\Program Files\Echo123\EndNews.wav

Audio File Used Here

C:\Program Files\Echo123\WarnNews.wav

C:\Program Files\Echo123\EndNews.wav

Save

Saves any changed data

Serial Player



Serial Audio File Player 1 & 2

The object of this players is to play pre recorded Audio Files in sequence. A file will play and when finished the next file will get ready to play but will wait until the next selected time before playing. 2 players are available which gives you the opportunity of running both serial players transmitting different files

Test And Play

The test and play button when clicked will cycle through the file that you have on your hard drive

Directory Where Your Audio Files Are

The player will need to know the director where you are holding your audio files the directory must be entered as "C:\YourDriectory\" Do not put any file name in the field only the directory path to the files. The file name MUST be numbered sequentially as an example 1.mp3 for the 1st file, 2.mp3 for the 2nd file and so on.

Select the audio file type that you are using mp3 or wav.

Playing Options and Times

Enter the day of the week also the time in 24 hour format that you want the file to play. If you do not want the second time to play leave it blank. A file will play and when finished the next file will get ready to play but will wait until the next selected time before playing.. Note that the file will play 15 seconds after the selected time to allow of announcements. The next file and playing file will be displayed

To play only once during a selected day simply enter 99 for Hour and 99 for Mins in the 2nd time fields.

Set Start File

If you alter the start file sequence number simply click the "Set Start File" button to reset the start file number

Loop at the end of files

This option when ticked will re play from the start the files once it has cycled through the list and reached the end.

Disconnect All

Disconnect All when ticked disconnects all nodes connected to your node.

Show As Busy

Show As Busy when ticked puts EchoLink in a busy state and stops stations connecting to your node while the file is playing.

Say File (Time Play)

On The Hour , Quarters and half and Half when ticked will play the next file in the sequence. A file will play and when finished the next file will get ready to play but will wait until the next selected time before playing.. Note that the file will play 15 seconds after the selected time to allow of announcements. The next file to be played and playing file will be displayed.

Audio File Beacon

When selected the files can be played at the entered beacon time entered in minutes

Also be mindful of your transmitter when transmitting large files you could damage your radio if you are running high power and don't have sufficient cooling. You are responsible for your equipment so check with the equipment manufacturer if you are unsure.

Player Utils



Player Progress

The player progress is shown here. The progress bar can be moved if required forward or backward

Stop Player

The stop player button simply stops the file that is playing.

Allow Breaks in Transmission.


This feature was added to allow radios with hardware transmitter timeout timers that can't be easily reprogrammed. My (VK2EX) FM900 has an inbuilt 4 minuet timer, so I have set the program to unkey the transmitter every 3.5 minuets and leave unkeyed for 6 milliseconds. Just a little click is heard on the RF side but this is enough to reset the timer. You can adjust these settings to your requirements, The Audio file will also pause while you PTT is off so you will not miss any of the played file.

Add Delay

This option when ticked will allow delays to be added in the Curtsy section and some of the player functions. Normally this would be ticked unless you are having delay problems

Also be mindful of your transmitter when transmitting large files you could damage your radio if you are running high power and don't have sufficient cooling. You are responsible for your equipment so check with the equipment manufacturer if you are unsure.

News Downloader

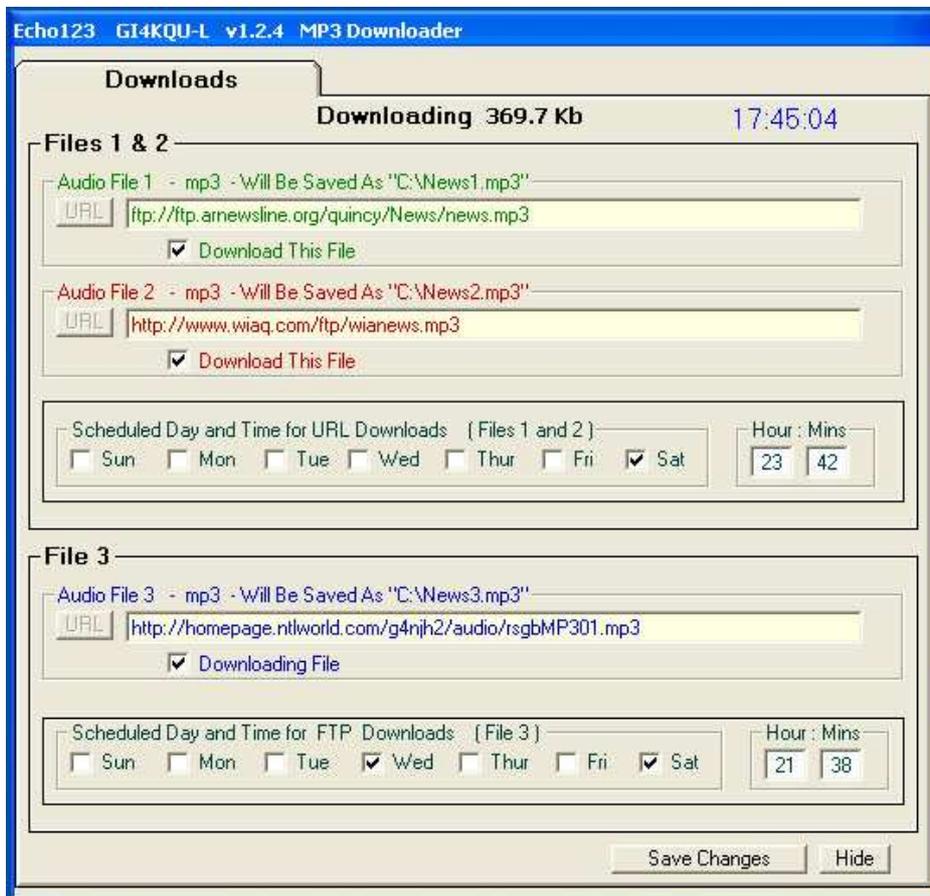

News Downloads .mp3

Enter the Website or FTP URL where you wish to download your audio file from. Indicated above the URL address is the file name where the selected file will be saved and the file name for that file. These file name are used in the main file player as shown above. Each individual URL can be downloaded at any time by clicking on the appropriate URL button. Download will not take place if the Use tick is not entered..

There are 2 Scheduled day and time sections that can be used to download the audio files by ticking the appropriate day and entering the time you wish the downloads to take place.

Files 1 & 2 are downloaded by the scheduler immediately beneath them that is in the same frame
 Files 3 is downloaded by the scheduler immediately beneath them that is in the same frame


Files that are downloaded will be saved as shown

Audio File 1 = C:\News1.mp3

Audio File 2 = C:\News2.mp3

Audio File 3 = C:\News3.mp3

=====

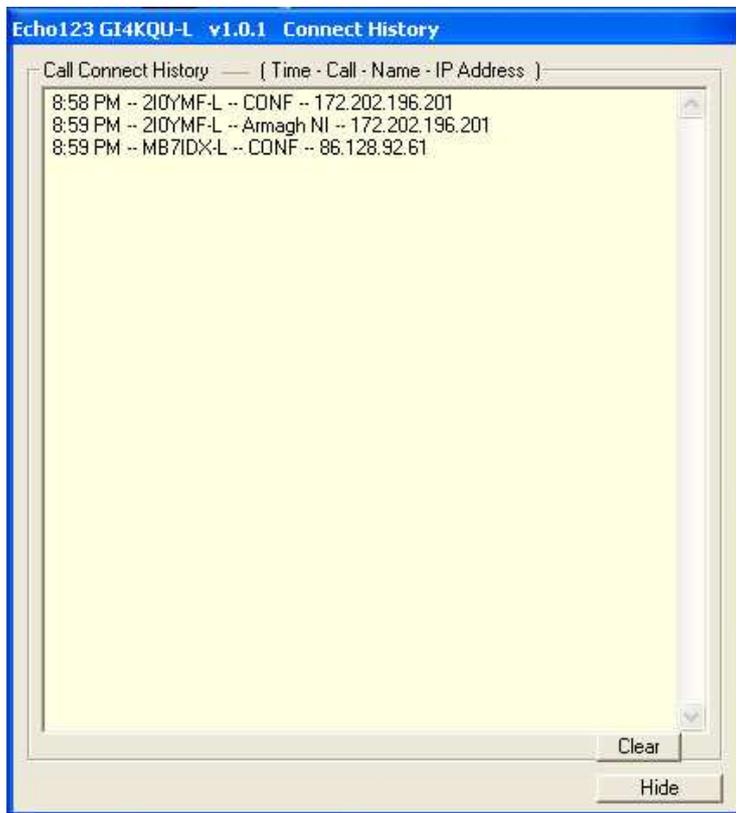

Connect History

This simply keeps a record while the program is running who has connected to your node. Showing the Time the station connected also the Call of the station there name and IP address.

=====

The Conference Controller

The Conference Controller is a simple to use utility that allows the Sysop/Owner of a conference or their admin controllers to send some of the commands with a click of a button.

The bridge software that is used for the conferences accepts commands normally via the text input on [EchoLink](#). This utility is not to replace this function but to assist and make some of the more used commands easier to enter. **All functions will not be available until you have logged into your conference with your Admin or Sysop Password.**

Conference

Enter your conference name example *IRELAND* or *ENGLAND*. There are 3 conferences that can be held in the system these are selected by clicking the button 1,2 or 3. Conference By clicking on one of the buttons (1,2 or 3) this will select the conference, disconnect all connected and connect the selected conference. The conference status will be shown.

Password

Enter your password. You can log on as ether as an Admin or Sysop by selecting the appropriate button.

Type Message or Dot Command

Here you can send messages to the users and all messages will be time stamped so as on their system they will see your local time that the message was sent. Use it as you would use the text message window in the [EchoLink](#) program.

Any of the Conference dot commands and be sent from here. Example “.mute call”

Connect Station to Conference

These fields enable you to put 2 stations that you may wish to connect with a simple click of the appropriate button.

Save you settings

When you have completed your input click on the Save Conference, Password and Stations Settings Button. Your setting will load in next time you start the program.

There are a lot of commands with the bridge conference program and I have only put my most commonly used commands. I'm sure that your needs could be different to mine.

Alt key plus the underscored letter on the buttons will give you quick access to those functions.

Mute Station

When pressed asks for the call of the station to be muted. When entered and OK is clicked the station is muted and a message sent to the text screen telling the offending station that they have been muted.

Disconnect Talking Station

This button enables you to disconnect the station that is causing a problem while they are transmitting. (Ver 1.02 of thebridge onward)

Mute Talking Station (Persistent)

This button enables you to mute the station that is causing a problem while they are transmitting. This is very useful as once they are muted other action can be taken. If this button is used the person will need to contact you or your admin to release the mute as it will stay with the station for ever till released.

Mute Message

When clicked asks for a call sign and when entered and OK is clicked a message is sent to the text screen telling the offending station that they have been muted. Normally you would use this if you have used the Mute Talking Station button as that button only mutes the talking station.

The mute message sent

*** CALL*** You have been Muted from the server due to your link or a link connected to you causing a problem. When problem sorted disconnect and reconnect to remove the Mute. <<Admin>>

Unmute All

Unmutes all muted stations connected to the conference.

You may need to click on the text box tab to see some of the replies from the conference

Unmute Station (Persistent)

When call sign or the station that was muted with the persistent option is entered the permanent muted station will be unmuted and a message sent via the text box “**** CALL **** You have been UnMuted. <<Admin>>”.

Who Is Muted

When clicked shows all stations who are Muted / Muted Persistent.

Connect station

Enables you to connect a station to the conference.

Disconnect Station

Disconnects the selected station from the conference.

Ban Station

Offending stations are banned from the conference. There is an option to have a timed Un-Ban

Remove Ban

Station removed from the ban list.

Who Is Banned


See who is on the banned list.

List Users

Show stations who are logged on to the Conference

Auto Con/Disc station to/From Conference

This option enables the sysop of a conference when logged on to connect or disconnect up to 2 selected stations to or from their conference on the selected days and times entered. If any of the times are not required simply enter "99" in the required fields

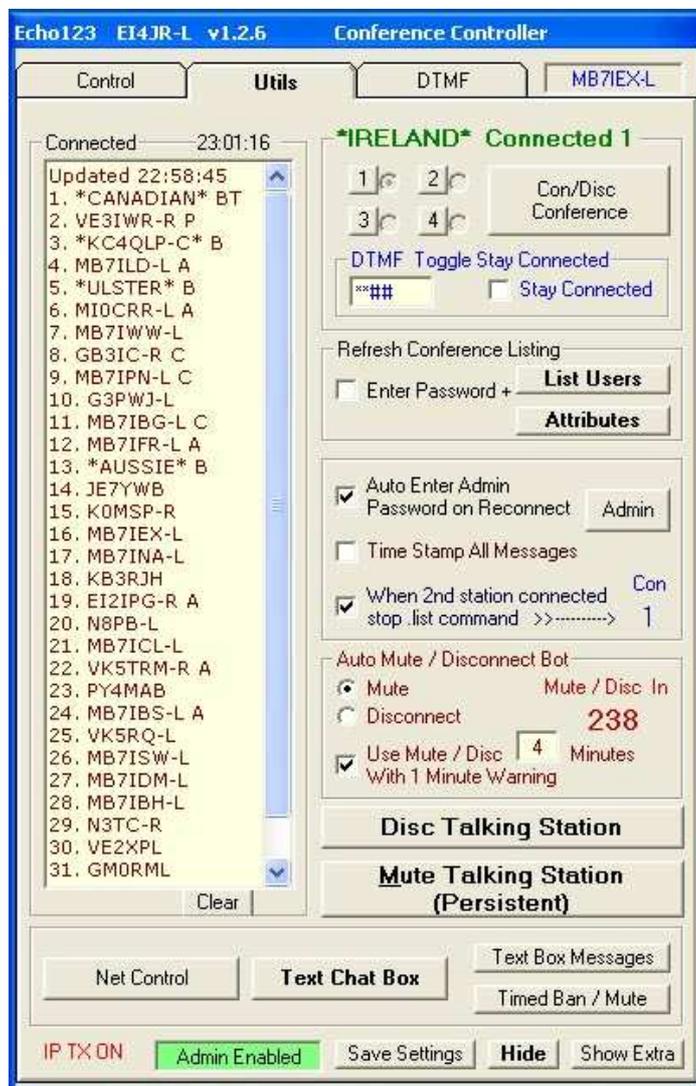

Utils

This section has been added to enable you to see an updated list of stations connected to the conference

Refresh Conference Listing

The listing refresh updates every so many set seconds when ticked. Setting the amount of seconds is achieved when the option is un-ticked. The minimum time that can be set is 35 seconds so any number lower than this setting will revert to 35 seconds

List Users

You will not be able to repeatedly press this button as the bridge will not allow this. Normally there must be a gap of 35 seconds before a re-list can be achieved.. There is a tick option when ticked will 1st send the selected admin password then send for the list of connected users

Attributes

This option when clicked will show you you the attributes meanings (The letters at the end of the list callsigns)

Stay Connected

When ticked the conference will stay connect and automatically re connect if disconnected. Note if you have been disconnected you will need to click the appropriate log on button to log you back into the conference

Conference selection

By clicking on one of the buttons (1,2 or 3) this will select the conference, disconnect all connected and connect the selected conference. The conference status will be shown.

Conference Connected

When the selected conference is connected this will be displayed.

Auto Enter Admin Password

When ticked the auto enter admin password on reconnect box

Admin Button

The admin button Sends the Admin Password when the conference is connected and is only available while the "Auto Enter Admin Password" box is un-ticked

Time Stamp All Messages

This option when ticked will time stamp all messages that you receive through the text box

Stop dot commends showing

When ticked if another station connects to your node they will not see the Dot commands that you send. This is especially useful when the ".list" command is sent every 35 seconds to refresh the list of connected stations to the Conference.

Auto Mute

This option when ticked will automatically mute a station or stations exceeding a set key down mute time. A 1 minute warning in the text box is given before the mute is put in place. When the station is muted another warning is sent saying that a mute has been put in place. If stations do not leave enough gap between over's this has the same effect as key down and the station talking at the end of the set time in minutes will be muted. The mute can be removed by the stations muted simply by disconnecting and reconnecting to the Conference server. Information is put in the text box what the muted station has to do.

Text box control for timeout minutes (4 minutes) added to enable all admin to have the same timeout of 4 minutes set on the conference using the "/timeout4/" command in the text chat.

Send Pre set message

This option enables you to have a pre set message that can be sent when the send button is clicked.

Disconnect Talking Station

This button enables you to disconnect the station that is causing a problem while they are transmitting. (Ver 1.02 of thebridge onward)

Mute Talking Station (Persistent)

This button enables you to mute the station that is causing a problem while they are transmitting. This is very useful as once they are muted other action can be taken. If this button is used the person will need to contact you or your admin to release the mute as it will stay with the station for ever till released.

Text Box Message

This Button opens a panel where you can store and use the pre set message screen See above

Who Is Muted

When clicked shows all stations who are muted.

Unmute All

Unmutes all muted stations connected to the conference. This will not remove the Persistent muted station

Timed Ban / Mute

This button opens the Ban and Mute options

Net Control Button

Can be used for remote control of nodes See below.

Echo123 EI4JR-L v1.2.6 Conference Controller

Control Utils **DTMF** *CANADIAN*

DTMF Mute

Call Sign	DTMF Mute	DTMF Un Mute
ENGLAND	*#0	*#1
VK2EX-L	*#00	*#11
AUSSIE		

Un Mute ALL

DTMF

##*## Un Mute ALL Muted Stations Un Mute ALL

DTMF Connect to Conference

Call Sign	DTMF Disconnect	DTMF Connect
AUSSIE	#*0	#*1
EI0IPG-R	#*00	#*11
GB3IC-R	#*000	#111
VK3JED		
CANADIAN		
*	Plus Node Number to connect to Conf.	

Disconnect from the conference ---- (Repeater Use)

Use DTMF #DDD* To Disconnect a Talking Station

DTMF Conference Connect

Use DTMF	*111*	To Connect to Conference 1
Use DTMF	*222*	To Connect to Conference 2
Use DTMF	*333*	To Connect to Conference 3
Use DTMF	*444*	To Connect to Conference 4

IP TX ON Admin Enabled Save Settings Hide Show Extra

DTMF Mute / Un Mute

This option enables the Admin / Sysop to remotely Mute or Un-Mute selected nodes. Enter the Node call sign, Mute / Un mute DTMF code. When a station is muted or un muted in this manor there is a warning sent to the text box informing the muted node also a message transmitted by RF on the link where the command was sent.

DTMF Un Mute ALL

This option enables the Admin / Sysop to remotely Un-Mute all muted nodes in the conference. Enter the Un mute DTMF code. When a station is un muted in this manor a message transmitted by RF on the link where the command was sent saying that all stations have been un muted.

DTMF Disconnect / Connect

This option enables the Admin / Sysop to remotely Disconnect or Connect a selected node. Enter the Node call sign, Connect / Disconnect DTMF code. When a station is Connected or Disconnected in this manor there is a warning message transmitted by RF on the link where the command was sent

DTMF Conference Connect

This option enables the Admin / Sysop to remotely Connect to one of the 3 conferences that has been selected above using DTMF. If the stay connected option has been selected then the DTMF selected conference will become the conference that will stay connected. If the Auto connect option above has been ticked then upon connection to the conference the Admin password will be sent.

Echo123 EI4JR-L v1.2.6 Conference Controller

Control Utlis DTMF MB7IEX-L

Window For Station Listings -23:04:22-IP TX ON

Connected 23:04:22

Updated 22:58:45

1. *CANADIAN* BT
2. VE3IWR-R P
3. *KC4QLP-C* B
4. MB7ILD-L A
5. *ULSTER* B
6. MIOCR-R A
7. MB7IW-W L
8. GB3IC-R C
9. MB7IPN-L C
10. G3PWJ-L
11. MB7IBG-L C
12. MB7IFR-L A
13. *AUSSIE* B
14. JE7YWB
15. KOMSP-R
16. MB7IEX-L
17. MB7INA-L
18. KB3RJH
19. EI2IPG-R A
20. N8PB-L
21. MB7ICL-L
22. VK5TRM-R A
23. PY4MAB
24. MB7IBS-L A
25. VK5RQ-L
26. MB7ISW-L
27. MB7IDM-L
28. MB7IBH-L
29. N3TC-R
30. VE2XPL
31. GM0RML

Clear

***IRELAND* Connected 1**

1 2 Con/Disc
3 4 Conference

DTMF Toggle Stay Connected
Stay Connected

Refresh Conference Listing
 Enter Password + **List Users**
Attributes

Auto Enter Admin
Password on Reconnect **Admin**

Time Stamp All Messages

When 2nd station connected
stop .list command >>-----> **Con 1**

Auto Mute / Disconnect Bot
 Mute **Mute / Disc In 201**
 Disconnect

Use Mute / Disc **4** Minutes
With 1 Minute Warning

Disc Talking Station

Mute Talking Station (Persistent)

Net Control **Text Chat Box** Text Box Messages
Timed Ban / Mute

IP TX ON **Admin Enabled** Save Settings **Hide** Hide Extra

CONF IRELAND Conf Server [32/6000]

->MB7IEX-L Exmouth SW UK
CANADIAN (Conference [3/500])
EI4JR-L Peter
GM0RML Art
VE2XPL Pete - CANADA
AUSSIE (Conference [6/1000])
MB7ILD-L Derry NI
N3TC-R SF, CA- DX Link
MB7IBH-L Bournemouth UK
MB7IDM-L Calvert , Bucks
MB7ISW-L www.m0gcp.co.nr
GB3IC-R CONF
MB7ICL-L Clacton, UK, 2m
EI2IPG-R Donegal 2m Rpt
VE3IWR-R OEG-1 London
MB7IBG-L Solihull
VK5RQ-L Playford S Aust
KC4QLP-C (Conference [13/1000])
MB7IBS-L Bristol UK
ULSTER (Conference [3/1000])

>> RESET << Disconnect and Re Connect

Disconnect Station **Mute Message**

Mute 1 Station With Message **Timed** Mute 1 Station With NO Message **Timed**

Unmute 1 Station With Message Unmute 1 Station With NO Message

Unmute All

Disconnect Talking Station

Mute Talking Station **Timed & Message**

Extra Commands Side Panel

The Show Extra button is used to display or hide the extra commands (Button changes from Show Extra to Hide Extra)



I have had requests for an extra panel that shows when requested to enable easy access to the most used commands Mute, Un Mute and Disconnect.

RESET Disconnect and Re Connect

I have added a panel that will display the connected stations and information. This is not all that successful at the moment as it will not display correct when a station connects to you and then disconnects so I have introduced the RESET button which disconnects ALL and reconnects to your selected conference which gives you the listing of all connected to the conference. If you have your node set not to accept any connections this works great and is very useful.

Connect station

Enables you to connect a station to the conference.

Mute Message

When clicked asks for a call sign and when entered and OK is clicked a message is sent to the text screen telling the offending station that they have been muted. Normally you would use this if you have used the Mute Talking Station button as that button only mutes the talking station

The mute message sent

*** CALL *** You have been Muted from the server due to your link or a link connected to you causing a problem. When problem sorted disconnect and reconnect to remove the Mute. <<Admin>>

Disconnect Station

Disconnects the selected station from the conference.

Mute Station with Message

When pressed asks for the call of the station to be muted. When entered and OK is clicked the station is muted and a message sent to the text screen telling the offending station that they have been muted. There is a timed Un-Mute option that can be selected before the button is clicked. If ticked and the button pressed the selected station will be muted and a timer will start and when the allotted time has elapsed the selected will be un-muted and a message sent to the text box

informing offending station has been unmuted.

Mute Station with NO Message

As above but without a message. If ticked and the button pressed the selected station will be muted and a timer will start and when the allotted time has elapsed the selected will be un-muted and a message sent to the text box informing offending station has been unmuted.

Disconnect Talking Station

This button enables you to disconnect the station that is causing a problem while they are transmitting. (Ver 1.02 of thebridge onward)

Mute Talking Station

This button enables you to mute the station that is causing a problem while they are transmitting. This is very useful as once they are muted other action can be taken. Yu now have the option of sending the Time, Callsign and a message saying that the offending station has been Time Muted. The time panel will open showing the station muted and the set time that the station will be unmuted

Unmute All

Unmutes all muted stations connected to the conference. This will no remove the Persistent muted station

Unmute 1 Station with Message

When call sign is entered and the muted station will be unmuted and a message sent via the text box “**** CALL **** You have been UnMuted. <<Admin>>”.

Unmute 1 Station with NO Message

As above with no Message

- **Timed Ban**

This button will take you to the Timed ban / Un-Ban setup

Timed Ban / Un-Ban / Timed Un-Mute

Echo123 EI4JR-L v1.2.6 Timed Ban / Un-Ban

Auto Ban 1 30 Seconds Delay

Sun Mon Tue Wed Thur Fri Sat

Callsign 1: E14ABC-R

Ban: Hour 1 Mins: 16 11

Un Ban: Hour 2 Mins: 16 12

Auto Ban 2 30 Seconds Delay

Sun Mon Tue Wed Thur Fri Sat

Callsign 2: *AUSSIE*

Ban: Hour 1 Mins: 22 00

Un Ban: Hour 2 Mins: 23 30

Timed Un-Ban

Callsign 1: [] Seconds Left: 900 Set Minutes: 15 Use Un-Ban

Callsign 2: [] Seconds Left: 900 Set Minutes: 15 Use Un-Ban

Timed Un-Mute

Callsign 1: [] Seconds Left: 900 Set Minutes: 15 Use Un-Mute

Callsign 2: [] Seconds Left: 900 Set Minutes: 15 Use Un-Mute

Callsign 3: [] Seconds Left: 900 Set Minutes: 15 Use Un-Mute

23:11:52 Save Hide

This option enables the sysop of a conference server to ban a station for set periods of time.

This is most useful when you know when there are Drive time nets or other type of nets that you do not wish going through your conference. It seems a bit drastic to place a ban on a station but this is done due to stations having auto connect active on there system.

Set the Callsign, Days of the week, Start ban time and Un-Ban time

This obviously could be used for punishing timed bas as well. Use this option wisely and with full consent of the station you are placing a ban on

Timed Un-Ban

If ticked and the button pressed from the Conference controller the selected station will be banned and a timer will start. A message sent to the text box informing offending station has been Time Banned. When the allotted time has elapsed the selected station will be un-banned. Callsign and set minutes can be changed at any time. The Use Un-Ban tick box must be ticked to start the timer. The Timed Un Ban message will be "Conference Name **** CALLSIGN **** Re-Connect Restriction has been removed. <<Admin Bot>>"


Timed Un-Ban data is not saved.

Timed Un-Mute

If ticked and the button pressed from the Conference controller the selected station will be muted and a timer will start. When the allotted time has elapsed the selected station will be un-muted and a message sent to the text box informing offending station has been un muted. Callsign and set minutes can be changed at any time. The Use Un-Mute tick box must be ticked to start the timer. Timed unmute message will be "Conference Name **** CALLSIGN **** You have been UnMuted. <<Admin Bot>>" Timed Un-Mute data is not saved.

=====

Messages for Sysop's Attention

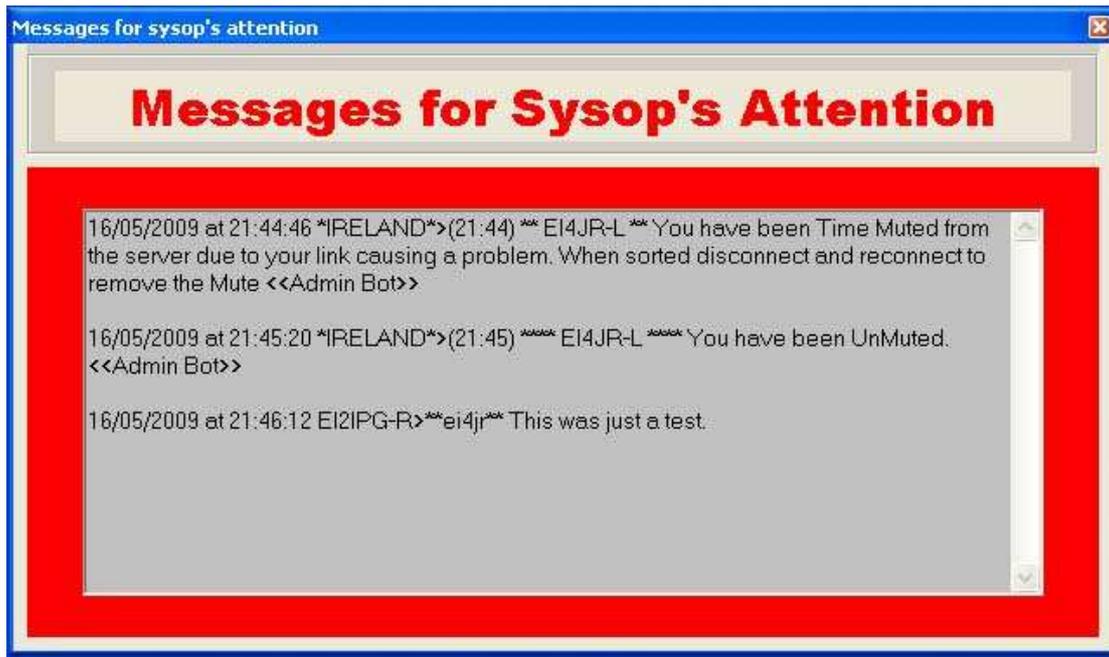

This screen will only appear if a message for the sysop has been left. Messages like Mute's, Automated Disconnects and other messages will be shown here that is addressed to your node. The information will include the Date - Time - Who sent the message and the message.

The automated messages if addressed to your node will be displayed as above. This is very useful as you will know if there has been a problem with your node.

Messages can be manually sent sent using the text box or text box chat to the sysop of the node using the syntax of star star callsign of the node star star and then your message. for example ****EI2IPG-R**** Your Message. You can leave off the " -L or -R " example ****EI2IPG**** or ****ei2ipg**** so a message sent informing the sysop of a problem or just a general message would look like this *****EI2IPG-R**** Your node sounded good today de Peter EI4JR". Remember this only works with nodes running this software

Utils



Disconnect ALL from the link if idle

This option is very useful as it will keep you connected to your selected node and enable your RF users connect your node to other station BUT if your RF users do not disconnect the nodes they have connected after the entered time set by you the all stations will be disconnected and the selected node will be re connected. If selected as long as there is RF going into your node the station will stay connected as long as the over dose not exceed the allotted time in minutes.

Text Box Messages

Echo123 EI4JR-L v1.2.6 Text Box Messages

Text Box Pre Set Messages: 1

Im using EchoProducer here on the node	Send
Check out the Echo Add-ons website www.echoaddons.com	Send
73's thanks for the great QSO	Send
Please leave bigger gaps so others can join in	Send
Im logged onto the "IRELAND" conference node number 2605	Send
I will be back just now was called away	Send
Please leave a 4 second gap between overs << Admin >>	Send
	Send
My node number here is 7904	Send
Information here : EI4JR Peter located in Donegal Ireland	Send

Text Box Pre Set Messages: 2

Using EchoProducer here. www.echoproducer.com	Send
.quote Please do not put your repeater Ident or courtesy tones on the conference serve	Send
.quote Please surpress your DTMF by selecting this option in your sysop configeration i	Send
.quote Nets are not permitted on this conference server system without prior arrangeme	Send
	Send

Save Hide

Text Box Messages 1 & 2

This option enables you to send up to 10 pre set messages messages via the Chat Text Box. Simply enter the data into the required fields. Click the send button to send your pre set message. Please note that the messages will only be sent to the text box when you have a station connected to you.

=====

History

Ver 1.2.6 --- 21st December 2008

- Net Control updated
- Graphical Text Chat Added
- Text Box Messages extended
- Conference Controller Updated
- Conference Controller Timed Restrictions added

=====

Ver 1.2.4 / 5 --- 12th April 2008

- Menu Rearranged
- Player Utils Added
- Serial Player 1 & 2 Added
- Text Box Messages Added
- Spanish file message changed to English
- News File Downloader changed

=====

Ver 1.2.3 --- 15th February 2008

- News Files can be used as beacons added
- *DTMF Mute / Un mute station options added to Conference Controller*
- DTMF Disconnect / Connect station option added to Conference Controller
- Extra Easy access utils to help Sysop / Admin. with Conference Controller
- Utils section added to menu
- Smart Timed disconnect for stations who forget to disconnect plus re-connect to your selected node

=====

Ver 1.2.2 --- 12th February 2008

- Option added to announce by RF Audio and IP Text Before playing the news
- Announcement by RF saying the news has finished
- Option to configure the record settings for the Parrot section. Get the best quality from your sound card

=====

Ver 1.2.1 --- 10th February 2008

- Time and Voice Beacon stopped when news being played

=====

Ver 1.2.0 --- 9th February 2008

- Repeater Functions Added
- Parrot functions Added
- ID drop out adjusted
- Time out on TX and RX Added
- CW and Audio ID's Added
- RTS / DTR select added
- Tidy up of some of the code

=====

Ver 1.0.1 --- 2nd February 2008

- Anti Squelch Added
- Connect Call History Added

=====

Released Ver 1.0.0 --- 31st January 2008

I hope you find the program useful

Donations are always welcome to help with the upkeep and advancement of the Repeaters & Software



Peter EI4JR



[Back To Home Page](#)

Page Updated on 06/09/2009

2 1 3 1 9 0 0