


User Manual

Wouxun KG-UV8D

Meimaris.com

Thanks for buying the  WOUXUN transceiver.

This transceiver offers latest design, enhanced features, solid performances and easy accessibility. We believe you will be pleased with the high quality and reliable features for all your communication needs.

READ THIS IMPORTANT INFORMATION ON THE SAFE AND EFFICIENT OPERATION BEFORE USING  PORTABLE TRANSCEIVER. This manual is ONLY suitable for KG-UV8D.

User Safety, Training, and General Information

READ THIS IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION BEFORE USING YOUR **Wouxun** PORTABLE TWO-WAY RADIO.

Compliance with RF Energy Exposure Standards

Your **Wouxun** two-way radio is designed and tested to comply with a number of national and international standards and guidelines (listed below) regarding human exposure to radio frequency electromagnetic energy. This radio complies with the IEEE (FCC) and ICNIRP exposure limits for occupational/controlled RF exposure environment at duty cycles of up to 50% talk-50% listen and should be used for occupational use only. In terms of measuring RF energy for compliance with the FCC exposure guidelines, your radio radiates measurable RF energy only while it is transmitting (during talking), not when it is receiving (listening) or in standby mode.

NOTE

» The approved batteries supplied with this radio are rated for a 5-5-90 duty cycle (5% talk-5% listen-90% standby), even though this radio complies with the FCC occupational RF exposure limits at duty cycles of up to 50% talk.

Your **Wouxun** two-way radio Complies with the following of RF energy exposure standards and guidelines:

- United States Federal Communications Commission, Code of Federal Regulations; 47CFR part 2 sub-part J
- American National Standards Institute (ANSI)/Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992
- Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1999 Edition
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998

Operational Instructions and Training Guidelines

To ensure optimal performance and compliance with the occupational/controlled environment RF energy exposure limits in the above standards and guidelines, users should transmit no more than 50% of the time and always adhere to the following procedures:

Transmit and Receive



To transmit (talk), push the Push-To-Talk (PTT) button; to receive, release the PTT button.

Hand-held radio operation






Hold the radio in a vertical position with the microphone 5 cm away from the lips and keep the antenna

far away from your head.


Body-worn operation

Always place the radio in an  approved clip, holder, holster, case, or body harness for this product. Use of non- -approved accessories may exceed FCC RF exposure guidelines.

Antennas & Batteries


- Use only  approved, supplied antenna or  approved replacement antenna.
- Unauthorized antennas, modifications, or attachments could damage the radio and may violate FCC regulations.
- Use only  approved, supplied batteries or  approved replacement batteries.
- Use of non- -approved batteries may exceed FCC RF exposure guidelines.



Approved Accessories

For a list of  approved accessories, see the accessories page of this user manual or visit the following website which lists approved accessories: <http://www.wouxun.com>

Notices to the User

- Government law prohibits the operation of unlicensed radio transmitters within the territories under government control.
- Illegal operation is punishable by fine or imprisonment or both.
- Refer service to qualified technicians only.

Warning 

- » It is important that the operator is aware of and understand hazards common to the operation of any transceiver. Explosive environment (such as gases, dust, fumes, etc). Turn off your transceiver while talking on fuel, or parking in gasoline service stations.
- » If you require this machine to be developed or get some changes, please contact with  or your  dealer.

FCC Caution:

This equipment has been tested and found to comply with the part 90 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if the equipment is not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment


does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following.

Measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Licensing Requirements

Your radio must be properly licensed Federal Communications Commission prior to use. Your

 Wireless dealer can assist you in meeting these requirements. Your dealer will program each radio with your authorized frequencies, signaling codes, etc., and will be there to meet your communications needs as your system expands.

Precautions

Only qualified technicians are allowed to maintain this product.

Do not use the radio or charge a battery in explosive areas such as coal gas, dust, steam, etc.

Switch OFF the radio while refueling or parking at a gas station.

Do not modify or adjust this radio without permission.

Do not expose the radio to direct sunlight over a long time, nor place it close to heat source.

Do not place the radio in excessively dusty, humid areas, nor place close to heating appliances.

Safety: It is important that the operator is aware of and understands hazards common to the operation of any radio.

This device complies with Part 15 of the FCC Rules.


Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning

» MODIFICATION OF THIS DEVICE TO RECEIVE CELLULAR RADIOTELEPHONE SERVICE SIGNALS IS PROHIBITED UNDER FCC RULES AND FEDERAL LAW.

CE Caution:

Hereby,  declares that this Two-way radio is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the DOC may be obtained through the following address.

Address: No.928 Nanhuan Road, Jiangnan High Technology Industry Park, Quanzhou, Fujian 362000,
China

Contents

Unpacking and Checking the Equipment	01
Installing Before Use	02
Getting Started	03-08
<i>Description of Features</i>	03-04
<i>Specifications</i>	05
<i>Description of Transceiver</i>	06-08
Description of Functions	09-12
<i>Multi Operation Modes</i>	09
<i>Basic Operation</i>	09-12
Shortcut Operation Sheet	13-18
How to Operate	19-51
<i>Step Frequency (STEP) ----- MENU 1</i>	19
<i>Squelch Level (SQL-LE) ----- MENU 2</i>	19-20
<i>Power Saver Mode (SAVE) ----- MENU 3</i>	20
<i>Transmitting Power Selection (TXP) ----- MENU 4</i>	20-21
<i>Begin/End Transmitting Prompt (ROGER) ----- MENU 5</i>	21
<i>Time-out Timer (TOT) ----- MENU 6</i>	21

Contents


<i>VOX (VOX) ----- MENU 7</i>	22
<i>Bandwidth Selection (W/N) ----- MENU 8</i>	22
<i>Voice Guide (VOICE) ----- MENU 9</i>	22-23
<i>Transmitting Overtime Alarm (TOA) ----- MENU 10</i>	23
<i>Beep Prompt Function (BEEP) ----- MENU 11</i>	23-24
<i>Display Language (Language) ----- MENU 12</i>	24
<i>Busy Channel Lockout (BCL) ----- MENU 13</i>	24
<i>Scan Mode (SC-REV) ----- MENU 14</i>	24-25
<i>Receiving CTCSS (R-CTC) ----- MENU 15</i>	25
<i>Transmitting CTCSS (T-CTC) ----- MENU 16</i>	26
<i>Receiving DCS (R-DCS) ----- MENU 17</i>	26
<i>Transmitting DCS (T-DCS) ----- MENU 18</i>	26-28
<i>CALL/VFTX on Side Key 1 (PF1) ----- MENU 19</i>	28
<i>SCAN/LAMP/SOS-CHTELE-ALARM/RADIO/DISABLE on Side Key 3 (PF3) ----- MENU 20</i>	29-31
<i>Working Mode Switch (CH-MDF) ----- MENU 21</i>	31-32
<i>Auto Backlight (ABR) ----- MENU 22</i>	32
<i>Offset Frequency (OFF-SET) ----- MENU 23</i>	32

<i>Frequency Shift Direction (SFT-D) ----- MENU 24</i>	33
<i>Stopwatch Timer (SECOND) ----- MENU 25</i>	33-34
<i>Channel Name Edit (CHNAME) ----- MENU 26</i>	34
<i>Channel Memory (MEM-CH) ----- MENU 27</i>	35-36
<i>Channel Delete (DEL-CH) ----- MENU 28</i>	36
<i>Scan CTCSS (SCN-CTC) ----- MENU 29</i>	37
<i>Scan DCS (SCN-DCS) ----- MENU 30</i>	37-38
<i>Mute Mode (SP-MUTE) ----- MENU 31</i>	38-39
<i>Caller ID Code Switch (ANI-SW) ----- MENU 32</i>	39
<i>Caller ID Code Edit (ANI-EDIT) ----- MENU 33</i>	39-40
<i>DTMF Sidetone (DTMF-ST) ----- MENU 34</i>	40-41
<i>Keypad Autolock (AUTOLOCK) ----- MENU 35</i>	41
<i>Priority Channel Switch (PRI CH-SW) ----- MENU 36</i>	41-42
<i>Repeater Setting (RPT-SET) ----- MENU 37</i>	42-45
<i>Repeater Speaker (RPT-SPK) ----- MENU 38</i>	46
<i>Repeater PTT (RPT-PTT) ----- MENU 39</i>	46
<i>Scan Add (SCAN-ADD) ----- MENU 40</i>	46

Contents

<i>Single-Tone Pulse Frequency (ALERT) ----- MENU 41</i>	47
<i>PTT ID Delay (PTT-DLY) ----- MENU 42</i>	47
<i>PTT Caller ID Modes (PTT-ID) ----- MENU 43</i>	47-48
<i>Ring Time (RING) ----- MENU44</i>	48
<i>Scan Channel Group A (SCG-A) ----- MENU 45</i>	48
<i>Scan Channel Group B (SCG-B) ----- MENU 46</i>	49
<i>Repeater Receipt Tone (RPT-TONE) ----- MENU47</i>	49
<i>Saving Scanned CTCSS/DCS(SC-QT) ----- MENU 48</i>	49-50
<i>Mute Setting on Sub-freugency (SMUTESET) ----- MENU 49</i>	50
<i>Selective Call Code Group Setting (CALLCODE) ----- MENU 50</i>	51
<i>Reset Setting(RESET) ----- MENU 51</i>	51
<i>Detailed Instruction for Some Important Functions</i>	52-56
<i>All Calls,Group Calls and Selective Calls</i>	52-54
<i>Repeater Usage</i>	54-56
<i>Optional Accessories</i>	57
<i>Troubleshooting</i>	58-59
<i>Announcement</i>	60


Unpacking and Checking the Equipment

Carefully unpack the transceiver. We recommend that you identify the items in the following table before discarding the packing material. If any item is missed or has been damaged during shipment, please notify your  dealer.

Supplied Accessories



Transceiver

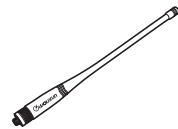

High gain antenna



Li-ion batterypack



Intelligent charger



Beltclip



Handstrap



User's manual



Warranty card

Installing before use


■ Install / remove batterypack

The batterypack is not fully charged before leaving factory. Please charge it before use.

NOTE

- » Do not shortcircuit the terminals or put the batterypack into fire.
- » Do not try to remove the case from the batterypack.

1. Please aim the batterypack at the back of the transceiver, and then push up and press down the batterypack to lock the release latch. (PIC1)
2. If you want to remove the batterypack, push down the release latch, and the batterypack will be released from the transceiver. (PIC2)

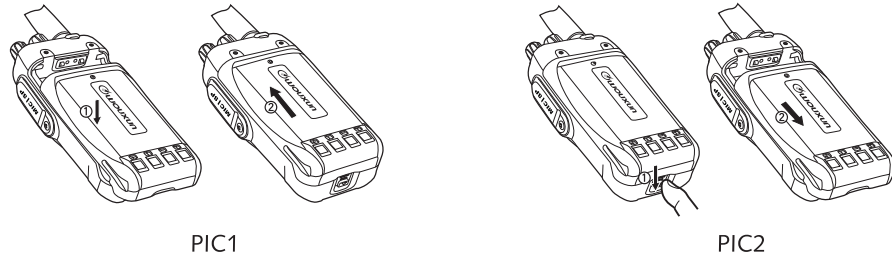

Getting Started

Description of Features

1. Duplex Repeater (VHF to UHF or UHF to VHF)
2. Duplex Work Mode (TX on one area while RX on the other area simultaneously)
3. Dual Receiving (RX on the same/different bands of A&B areas simultaneously)
4. Large Colorful Screen
5. Frequency Range (suitable for different countries or areas):
136-174&400-470MHz (RX/TX) 144-146&430-440MHz(RX/TX)
136-174&400-480MHz (RX/TX) (RX)FM:76MHz-108MHz(Space:100K)
136-174&420-520MHz (RX/TX)
6. Dual Display
Dual Band Display on Large Screen, Two Independent Operation System
7. Frequency Offset and Direction Programmable in Repeater Mode
UHF/VHF or VHF/UHF Cross-Band Repeater
8. 999 Memory Channels
9. Strong and Stable Output Power (VHF: 5W/UHF: 4W)
10. QT/DQT Encoding/Decoding, QT/DQT Scan
11. VOX
12. Multi Definition for Sidekeys
13. Incoming Message Display
Caller ID display

14. DTMF Encoding&Decoding
15. All Calls, Group Calls And Selective Calls
16. SOS Function
17. Priority Scan Function
18. Remote Alarm
19. Wide/Narrow Bandwidth Selection (25KHz/12.5KHz)
20. Voice Guide:Chinese/English
21. Chinese/English Screen Display
22. Bright Flashlight Illumination
23. Single-Tone Pulse Frequency: 2100Hz/1750Hz/1000Hz/1450Hz (signalling for activating repeater)
24. Reverse Frequency
25. Stopwatch

Specifications


Intergration		Receiving	Wide bandwidth	Narrow bandwidth
Frequency Range	Suitable for Different Countries or Areas 136-174MHz & 400-470MHz 136-174MHz & 400-480MHz 136-174MHz & 420-520MHz 144-146MHz & 430-440MHz 144-148MHz & 420-450MHz	Adjacent Channel Selectivity	≤ 70dB	≤ 60dB
		Inter Modulation	≤ 65dB	≤ 60dB
		Spurious Response	≤ 70dB	≤ 70dB
		Audio Response	+1~3dB (0.3~3KHz)	+1~3dB(0.3 ~2.55KHz)
Step	5KHz / 6.25KHz / 10KHz / 12.5KHz / 25KHz / 50KHz / 100KHz	Signal to Noise Ratio	≥ 45dB	≥ 40dB
		Audio Distortion	≤ 5%	
Channel Number	999	Audio Power	Transceiver ≤ 500mW	
Work Mode	F2D / F3E	Sensitivity	UHF/VHF:0.25μV(12dB SINAD)	
Operating Temperature	-20℃ or 40℃			
Antenna Resistance	50Ω			
Voltage	7.4VDC			
Weight	490g			
Size	124.5x 61.49 x 33.88 (mm)			

Transmitter	Wide bandwidth	Narrow bandwidth	Transmitter	Wide bandwidth	Narrow bandwidth
Type of Modulation	16K F3E	11K F3E	Max Frequency Deviation	± 5KHz	± 2.5KHz
Adjacent Channel Power	≥ 70dB	≥ 60dB	Frequency Stability	± 2.5ppm	
Spurious	≥ 60dB	≥ 60dB	Audio Distortion	≤ 5%	
Audio Response	+1~3dB (0.3~3KHz)	+1~3dB (0.3~2.55KHz)	Output Power	5W/1W(VHF)	
				4W/1W(UHF)	

Description of Transceiver

LCD Display

There are various indicators display on the screen when powering on. Please refer the below table to learn what the indicators stand for accordingly.

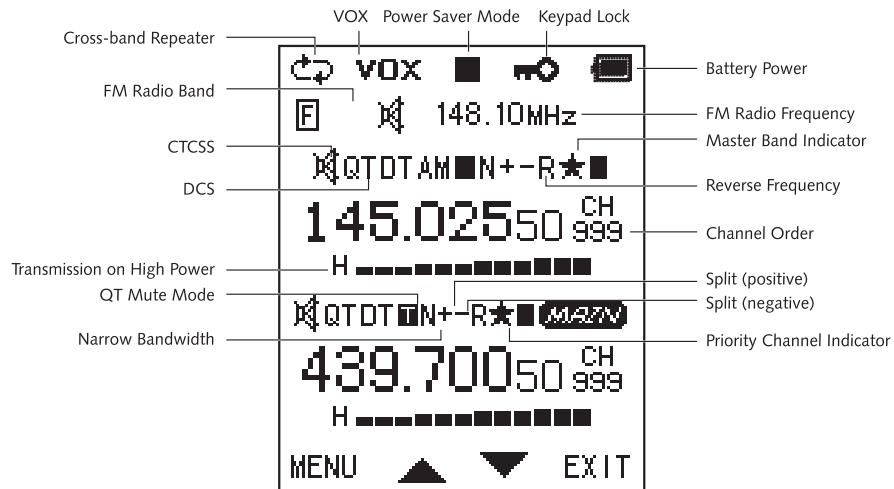

Flashlight

Antenna

Receiving LED (Green)

LCD Display

Function Key

A/B Switch Key on Master Frequency

Short Press: Single/Dual Display Mode
Long Press: Activate/Exit Repeater

Number Keys

Up/Down Keys

Rotary Encoder

Power/Switch/Volume Control

Transmitting LED (Red)


Speaker (MIC)


Exit Key

VFO/MR Switch Key

Reverse Frequency/Scan Key

Keypad Lock/Stopwatch Key

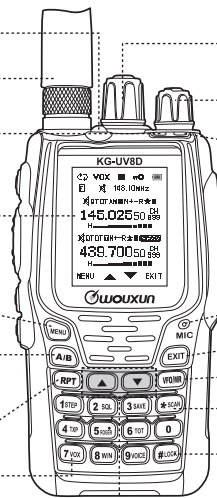

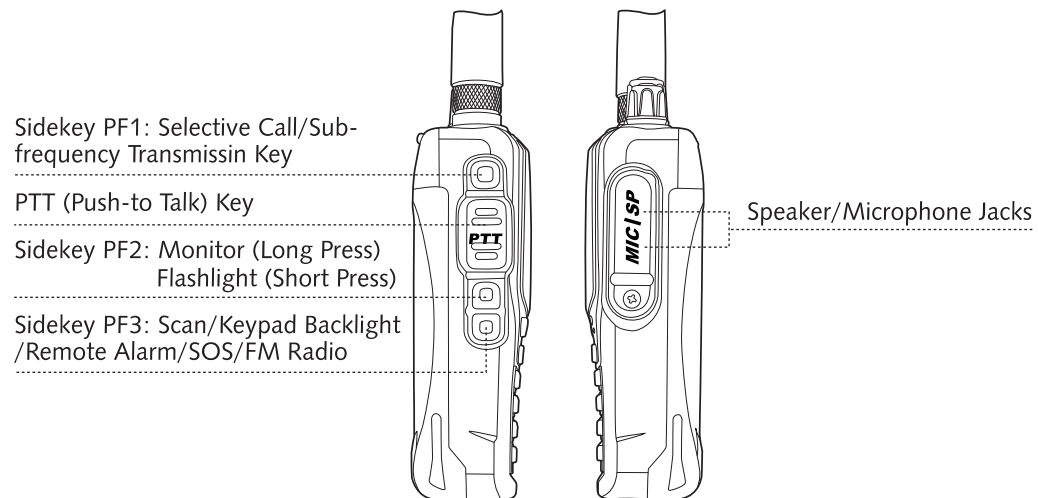

Description of Functions

Multi Work Modes



- Normal transceiver's communication mode
- Directional cross-band repeater mode or two way cross-band repeater mode

Note: Work modes can be switched via **RPT** key.

- There are A and B areas on the LCD screen to display two bands' status. The master band is with a sign "MAIN" on the top right. This is an important sign, since all the below operation instruction are for the master band. The band without this sign is called "Sub-band".
- Specifications on A&B bands can be programmed separately. Please set the band that you want to program any specifications into as the master band firstly.
- Some functions are not allowed to be used under directional cross-band repeater or two way cross-band repeater mode.

Basic operation

■ Quick Search

Short press  or  key to search the desired function/parameter during your setting, while long press to quick search.

■ DTMF encoding

This transceiver has DTMF encoding. By pressing the right number key on transmitting you can choose

Description of Functions

the right DTMF tone which you want to TX. Number key and corresponding DTMF encoding are as belows:

RPT	▲	▼	VFO/MR
1 STEP	2 SQL	3 SAVE	* SCAN
4 TXP	5 ROGER	6 TOT	0
7 VOX	8 WIN	9 VOICE	# LOCK

→

A	B	C	D
1	2	3	*
4	5	6	0
7	8	9	#

■ Setting Reverse Frequency Function

When the reverse frequency function is activated, the transmitting and receiving frequencies can be exchanged. And the CTCSS/DCS encoding and decoding can also be exchanged.

How to operate reverse frequency function:

In standby mode, long press ***SCAN** to turn on the reverse frequency function; long press ***SCAN** again to turn off.

 
■ Working Mode Switch

Two work modes: VFO(Frequency) mode and MR(Channel) mode. Three different display manners for MR mode.

A. Channel NO. B. Frequency+Channel NO. C. Channel Name

It is available to switch between the frequency mode and the channel mode manually or via the programming software. If you want, you can set the password for the mode switch.

VFO/MR(Frequency/Channel switch) switch is indicated as following:



When you set password for switching work mode, press **MENU**, LCD screen display , please input the correct password and press **MENU**. If inputting the wrong password, the work mode switch can not be workable. Password only can be programmed via **Wouxun** supplied programming software. When the password is made up of full "ZERO", the work mode switch does not require password.

Wire Clone Function

Using wireclone	1.Installing the battery for source transceiver and target transceiver. 2.Powering on target transceiver. 3.Press PF3 of source transceiver, and power on at the same time. 4.Red LED of the source radio flashes, the cloning activates	LED is flashing red during cloning. LED goes out in case of successful cloning. LED glows continuous red in case of cloning failure.
	Target Transceiver	Green indicator is flashing during cloning. Indicator is off when completing cloning.

Description of Functions

How to use the intelligent charger

When the battery power is low, the transceiver will activate voice guide, and prompt "Di" in every 5 seconds.

1. Insert the AC plug into outlet (AC:90-240V), the charger indicator flashes once. That means the charging is in standby.
2. Insert the battery into the charger, the RED indicator continuously flashes. That means the charging is on the progress.

While the GREEN indicator continuously flashes. That means the charging is complete.

NOTE

- » When inserting the exhausted battery into the charger, it will pre-charge the battery in trickling mode, the RED light of charger flashes and lasts 10-20 minutes, then start normal charger with RED light keeping on, it will turn to GREEN when it is fully charged.
- » Trickle charge the exhausted battery is to protect the lithium-ion battery.


Shortcut Operation Sheet

Function order	Function name	Enter function set	Screen display	Select parameter	Selectable parameter explanation	Confirm	Return to standby	See page
1 Step Frequency		MENU → 1 STEP →		MENU → Press ▲ or ▼ key Select parameter	8 frequency steps available: 5k/6.25k/10k/12.5k/50k/ 100k	MENU	EXIT	P19
2 Squelch Level		MENU → 2 SQL →		MENU → Press ▲ or ▼ key Select parameter	Squelch level from 0 to 9	MENU	EXIT	P19 -20
3 Power Saver Mode		MENU → 3 SAVE →		MENU → Press ▲ or ▼ key Select parameter	ON: Activate OFF: Deactivate	MENU	EXIT	P20
4 Transmitting Power Selection		MENU → 4 TXP →		MENU → Press ▲ or ▼ key Select parameter	H: High power (VHF 5W/UHF 4W) L: Low power (1W)	MENU	EXIT	P20 -21
5 Begin/End Transmitting Prompt		MENU → 5 ROGER →		MENU → Press ▲ or ▼ key Select parameter	OFF: turn off this function, without any voice prompting. BOT: press PTT, voice prompt when beginning transmitting EOT: release PTT, voice prompt when ending transmitting BOTH: press and release PTT, voice prompt	MENU	EXIT	P21
6 Time-out Timer		MENU → 6 TOT →		MENU → Press ▲ or ▼ key Select parameter	TOT has 40 levels in steps of 15 seconds. OFF: Turn off TOT	MENU	EXIT	P21
7 VOX		MENU → 7 VOX →		MENU → Press ▲ or ▼ key Select parameter	VOX has levels from 1 to 9 OFF: Turn off VOX transmission	MENU	EXIT	P22
8 Bandwidth Selection		MENU → 8 WBN →		MENU → Press ▲ or ▼ key Select parameter	WIDE: 25KHz NARR: 12.5KHz	MENU	EXIT	P22


Shortcut Operation Sheet

9 Voice Guide	MENU → 9 VOICE →		MENU → Press ▲ or ▼ key Select parameter	CHINESE: Chinese voice prompt ENGLISH: English voice prompt OFF: Turn off voice prompt	MENU → EXIT P22 -23
10 Transmitting Overtime Alarm	MENU → 1 STEP → 0 →		MENU → Press ▲ or ▼ key Select parameter	ON: Activate OFF: Deactivate	MENU → EXIT P23
11 Beep Prompt	MENU → 1 STEP → 1 STEP →		MENU → Press ▲ or ▼ key Select parameter	ON: Turn on beep prompt function OFF: Turn off beep prompt function	MENU → EXIT P23 -24
12 Display Language	MENU → 1 STEP → 2 SQL →		MENU → Press ▲ or ▼ key Select parameter	CHINESE ENGLISH	MENU → EXIT P24
13 Busy Channel Lockout	MENU → 1 STEP → 3 SAVE →		MENU → Press ▲ or ▼ key Select parameter	ON: Turn on BCL OFF: Turn off BCL	MENU → EXIT P24
14 Scan Mode	MENU → 1 STEP → 4 TXP →		MENU → Press ▲ or ▼ key Select parameter	3 Kinds of Scan modes TO: Time scanning mode CO: Carrier mode scan SE: Search mode scan	MENU → EXIT P24 -25
15 Receiving CTCSS	MENU → 1 STEP → 5 ROGER →		MENU → Press ▲ or ▼ key Select parameter	50 groups CTCSS (67.0Hz-254.1Hz) OFF: Turn off CTCSS	MENU → EXIT P25
16 Transmitting CTCSS	MENU → 1 STEP → 6 TOT →		MENU → Press ▲ or ▼ key Select parameter	50 groups CTCSS (67.0Hz-254.1Hz) OFF: Turn off CTCSS	MENU → EXIT P26
17 Receiving DCS	MENU → 1 STEP → 7 VOX →		MENU → Press ▲ or ▼ key Select parameter	105 groups DCS (D023N-D754I) OFF: Turn off DCS	MENU → EXIT P26
18 Transmitting DCS	MENU → 1 STEP → 8 WIN →		MENU → Press ▲ or ▼ key Select parameter	105 groups DCS (D023N-D754I) OFF: Turn off DCS	MENU → EXIT P26 -28
19 Side Key Setting	MENU → 1 STEP → 9 VOICE →		MENU → Press ▲ or ▼ key Select parameter	CALL: Selective Call VFTX: Transmission on Sub-frequency	MENU → EXIT P28

 20 Side Key Setting



21 Working Mode Switch

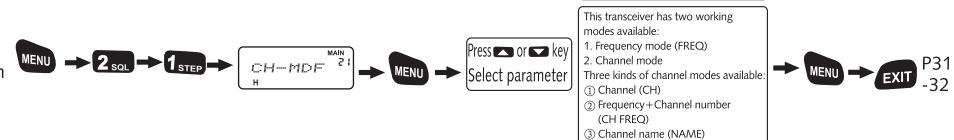

22 Auto Backlight



23 Offset Frequency



24 Frequency Shift Direction



25 Stopwatch Timer



26 Channel Name Edit



27 Channel Memory



Shortcut Operation Sheet

- 28 Channel Delete**
 MENU → 2 SQL → 8 WIN → DEL-CH_H²⁸ → MENU → Press ▲ or ▼ key Select parameter → 999 channels available → MENU → EXIT P36
- 29 CTCSS Scanning**
 MENU → 2 SQL → 9 VOICE → SC-CTC_H²⁹ → MENU → Press ▲ or ▼ key Select parameter → In receiving mode, press MENU to activate CTCSS scanning → MENU → EXIT P37
- 30 DCS Scanning**
 MENU → 3 SAVE → 0 → SC-DCS_H³⁰ → MENU → Press ▲ or ▼ key Select parameter → In receiving mode, press MENU to activate DCS scanning → MENU → EXIT P37-38
- 31 Mute Settings**
 MENU → 3 SAVE → 1 STEP → SP-MUTE_H³¹ → MENU → Press ▲ or ▼ key Select parameter → There are three squelch settings: QT*DTMF, QT+DTMF, QT → MENU → EXIT P38-39
- 32 Caller ID Transmission Settings**
 MENU → 3 SAVE → 2 SQL → ANI-SW_H³² → MENU → Press ▲ or ▼ key Select parameter → ON: Activate OFF: Deactivate → MENU → EXIT P39
- 33 Editing Caller ID**
 MENU → 3 SAVE → 3 SAVE → ANI-EDIT_H³³ → MENU → Press ▲ or ▼ key Select parameter → Individual Caller IDs can be chosen within the range 100-999999, and cannot begin with 0 → MENU → EXIT P39-40
- 34 DTMF Sidetone Settings**
 MENU → 3 SAVE → 4 TXP → DTMFST_H³⁴ → MENU → Press ▲ or ▼ key Select parameter → DT-ST: Keypad sidetone will be activated when transmitting ANI-ST: Caller ID sidetone will be activated when transmitting DT-ANI: Caller ID sidetone and keypad sidetone will be activated when transmitting OFF: Deactivate all → MENU → EXIT P40-41
- 35 Keypad Auto Lock**
 MENU → 3 SAVE → 5 ROGER → AUTOLK_H³⁵ → MENU → Press ▲ or ▼ key Select parameter → ON: Activate OFF: Deactivate → MENU → EXIT P41
- 36 Priority Channel Switch**
 MENU → 3 SAVE → 6 TOT → PRICH-SW_H³⁶ → MENU → Press ▲ or ▼ key Select parameter → ON: Activate OFF: Deactivate → MENU → EXIT P41-42
- 37 Repeater Settings**
 MENU → 3 SAVE → 7 VOX → RPT-SET_H³⁷ → MENU → Press ▲ or ▼ key Select parameter → X-DIRPT: Directional cross band repeat X-TWRPT: Two-way cross band repeat → MENU → EXIT P42-45

- 38 Repeater Speaker Switch**
 MENU → 3 SAVE → 8 WIN → RPT-SPK_H³⁸ → MENU → Press ▲ or ▼ key Select parameter → ON: Speaker is activate when repeating OFF: Speaker is deactivate when repeating → MENU → EXIT P46
- 39 Repeater PTT Switch**
 MENU → 3 SAVE → 9 VOICE → RPT-PTT_H³⁹ → MENU → Press ▲ or ▼ key Select parameter → ON: PTT transmission activated when repeating OFF: PTT transmission blocked when repeating → MENU → EXIT P46
- 40 Scan Add**
 MENU → 4 TXP → 0 → SCAN-ADD_H⁴⁰ → MENU → Press ▲ or ▼ key Select parameter → ON: When scanning channels, they will be added to the scanning table OFF: Channels will not be added to the table when scanning → MENU → EXIT P46
- 41 Single-Tone Pulse Frequency**
 MENU → 4 TXP → 1 STEP → ALERT_H⁴¹ → MENU → Press ▲ or ▼ key Select parameter → There are 4 single-tone pulse frequency options:1750; 2100; 1000; 1450 → MENU → EXIT P47
- 42 PTT ID Delay**
 MENU → 4 TXP → 2 SQL → PTT-DLY_H⁴² → MENU → Press ▲ or ▼ key Select parameter → Options: 100ms 200ms...3000ms → MENU → EXIT P47
- 43 Caller ID Transmission Mode**
 MENU → 4 TXP → 3 SAVE → PTT-ID_H⁴³ → MENU → Press ▲ or ▼ key Select parameter → BOT: Press PTT to transmit caller ID. EOT: Release PTT to transmit caller ID. BOTH: Press and release PTT will both transmit caller ID. → MENU → EXIT P47-48
- 44 Ring Time**
 MENU → 4 TXP → 4 TXP → RING_H⁴⁴ → MENU → Press ▲ or ▼ key Select parameter → 1-10 Levels:each level 1 second OFF:Deactivate → MENU → EXIT P48
- 45 Scan Channel Group NO. of A Area**
 MENU → 4 TXP → 5 ROGER → SCG-A_H⁴⁵ → MENU → Press ▲ or ▼ key Select parameter → All: scan all Group 1, Group 2, Group 3, Group 4, Group 5, Group 6, Group 7, Group 8, Group 9, Group 10 → MENU → EXIT P48
- 46 Scan channel Group NO. of B Area**
 MENU → 4 TXP → 6 TOT → SCG-B_H⁴⁶ → MENU → Press ▲ or ▼ key Select parameter → All: scan all Group 1, Group 2, Group 3, Group 4, Group 5, Group 6, Group 7, Group 8, Group 9, Group 10 → MENU → EXIT P49

Shortcut Operation Sheet

- 47 Repeater Receipt Tone → **4** TXP → **7** VOX → → → Press or key
Select parameter
ON: Activate
OFF: Deactivate
 → P49
- 48 Saving Scan Mode → **4** TXP → **8** WIN → → → Press or key
Select parameter
ALL: Save both RX and TX CTCSS/DCS
DEC: Save RX CTCSS/DCS
NEC: Save TX CTCSS/DCS
 → P49-50
- 49 Setting Sub-Frequency Mute → **4** TXP → **9** VOICE → → → Press or key
Select parameter
OFF: Deactivate this function
TX: Deactive volume on sub-frequency when transmitting on master frequency
RX: Deactive volume on sub-frequency when receiving on master frequency
TX/RX: Deactive volume on sub-frequency when transmitting and receiving on master frequency
 → P50
- 50 Selective Call Code Group Setting → **5** ROGER → **0** → → → Press or key
Select parameter
Selective call group:1-20
 → P51
- 51 Reset Setting → **5** ROGER → **1** STEP → → → Press or key
Select parameter
VFO: Reset menu functional parameters
ALL: Reset all (menu & channel) functional parameters
 → P51

How to Operate

Step Frequency (STEP) ----- MENU 1

In standby, press + **1** STEP , the screen displays .
Press to enter, press / to select the desired step, then press to confirm, finally press to return to standby.

The frequency steps selectable for this transceiver are as follows:
5.00KHz, 6.25KHz, 10.00KHz, 12.50KHz, 25.00KHz, 50.00KHz and 100KHz.

Squelch Level (SQL-LE) ----- MENU 2

Squelch level is about when the signal is strong enough to turn on the squelch function, and when it is weak enough to turn off. You may hear the voice from the loudspeaker when turning ON the squelch and receiving the same signal from other transceivers. Higher level makes it harder to receive the weak signals, while lower level will be interfered by noises and/or unwanted signals.

In standby, press + **2** SQL , the screen displays .
Press to enter, press / to select the desired squelch level, then press to confirm, finally press to return to standby.

NOTE

» The squelch level for this transceiver has 0-9 levels selectable, and level 0 means turn off the squelch function. The higher level of the squelch is set, the stronger receiving signal is needed.

Power Saver Mode (SAVE) --- MENU 3

When the power saver function is ON, the receiver circuit will be cut off for a moment, and then re-activate to detect the signals for a while, in order to reduce the battery capacity consumption.

In standby, press  + , the screen displays 

Press  to enter, it shows 'ON', press  /  to select turn ON/OFF the power saver function.

Press  to confirm, and then press  to return to standby.

Transmitting Power Selection (TXP) --- MENU 4

In frequency mode, press  + , the screen displays 





Press  to enter, it shows 'HIGH', press  /  to select HIGH/LOW power, then press  to confirm, finally press  to return to standby.

NOTE

» This transceiver has HIGH and LOW transmitting power selectable:
VHF: HIGH: 5W LOW:1W
UHF: HIGH: 4W LOW:1W

Transmission Prompt settings (ROGER) --- Menu 5

When the transceiver is standby, press the  +  keys and the screen will display: 






Press the key to access the menu, and after pressing the  /  keys to choose the required prompt mode, press the  key to confirm, or the  key to return to standby.

The transceiver features 4 kinds of prompt: BOT (beginning of transmission), EOT (end of transmission), BOTH (beginning and end of transmission), and OFF (prompts deactivated).

Time-out Timer (TOT) --- MENU 6

This transceiver can be set in 60 levels with 15 seconds each, between 15 and 900 seconds.

In standby, press  + , the screen displays 

Press  to enter, press  /  to select the desired timer level, then press  to confirm, finally press  to return to standby.

How to Operate

VOX (VOX) --- MENU 7

In standby, press **MENU** + **7 VOX**, the screen displays 

Press **MENU** to enter, press **▲** / **▼** to select VOX level(1-9), then press **MENU** to confirm, finally press **EXIT** to return to standby.

NOTE

- » The higher level of VOX is set, the higher volume is needed.
- » In SCAN and FM radio modes, the VOX function is not available.

Bandwidth Selection (W/N) --- MENU 8

In standby, press **MENU** + **8 W/N**, the screen displays 

Press **MENU** to enter, it shows 'WIDE', press **▲** / **▼** to select WIDE/NARROW bandwidth, then press **MENU** to confirm, finally press **EXIT** to return to standby.

There are two bandwidths for option:WIDE:25KHz and NARR:12.5KHz

Voice Guide (VOICE) --- MENU 9

In standby, press **MENU** + **9 VOICE**, the screen displays 

Press **MENU** to enter, press **▲** / **▼** to select ON or OFF, and then press **MENU** key to confirm, finally press **EXIT** to return to standby.

NOTE

- » Turn off MENU 9 and MENU 11 at the same time to turn off all the voice prompt if required.

Transmitting Overtime Alarm (TOA) --- MENU 10

In standby, press **MENU** + **1STEP 0**, the screen displays 

Press the **MENU** key to access the menu, and after pressing the **▲** / **▼** keys to select the required time, press the **MENU** key to confirm, and the **EXIT** key to return to standby.

TOA has a maximum length of 10seconds, each level corresponding to 1second. OFF: Deactivate TOA.

Special Reminder

- » When the transmission exceeds the "Time-out timer" set time, a error tone will prompt, and transmission is stopped automatically.

Beep Prompt Function (BEEP) --- MENU 11

In standby, press **MENU** + **1STEP 1STEP**, the screen displays 

How to Operate

Press **MENU** to enter, press **▲** / **▼** to turn ON/OFF the beep prompt function, then press **MENU** to confirm, finally press **EXIT** to return to standby.

Display Language (LANGUAGE) --- MENU 12

In standby, press **MENU** + **1STEP** **2 SQL**, the screen display 

Press **MENU** to access the function, press **▲** / **▼** to select the desired language, and then press **MENU** to confirm, press **EXIT** to return to standby mode.

Two Options: CHINESE and ENGLISH

Busy Channel Lockout (BCL) --- MENU 13

In frequency mode, press **MENU** + **1STEP** **3 SAVE**, the screen displays 

Press **MENU** to enter, press **▲** / **▼** to select ON/OFF this function, then press **MENU** to confirm, finally press **EXIT** to return to standby.

Note: This function is invalid in cross band repeater or repeater/transmitter modes.

Scan Mode Settings (SC-REV) --- Menu 14

When the transceiver is standby, press the **MENU** + **1STEP** **4 TXP**, keys and the screen will display 

Press the **MENU** key to access the menu, and after pressing the **▲** / **▼** keys to select the required set-

ting, press the **MENU** key to confirm, and the **EXIT** key to return to standby

The transceiver has 3 scan modes: TO, CO, and SE:

TO: after finding a carrier wave signal, scanning will continue if no operations are carried out within 5 seconds.

CO: scanning will stop when a carrier wave signal has been found, and scanning will continue if the carrier wave signal is lost for 3 seconds.

SE: scanning will stop when a carrier wave signal is found.

NOTE

» Hold on ***SCAN** for 2 seconds to access the scan mode.

Receiving CTCSS settings (RX-CTC) --- Menu 15

When the transceiver is in standby, press the **MENU** + **1STEP** **5 RX-CTC** keys and the screen will display 

Press the **MENU** key to access the menu, and after pressing the **▲** / **▼** key to select the CTCSS you desire, press the **EXIT** key to return to standby.

The CTCSS has a total of 50 groups, ranging from 67.0 to 254.1HZ. OFF: Deactivate.

How to operate

Transmitting CTCSS settings (TX-CTC) --- Menu 16

When the transceiver is standby, press the **MENU** + **1STEP** **6TOT** keys and the screen will display 

Press the **MENU** key to access the menu, and after pressing the **▲** / **▼** key to select the CTCSS you desire, press the **MENU** key to confirm, and press the **EXIT** key to return to standby.

CTCSS has a total of 5 groups, ranging from 67.0-254.1Hz. OFF: Deactivate

Receiving DCS settings (RX-DCS) --- Menu 17

When the transceiver is standby, press the **MENU** + **1STEP** **7VOX** keys and the screen will display 

Press the **MENU** key to access the menu, and after pressing the **▲** / **▼** key to select the DCS you desire, press the **MENU** key to confirm, and press the **EXIT** key to return to standby.

DCS: 105 groups of positive code, 105 groups of negative code, ranging from D023N to D754I.

OFF: Deactivate.

Transmission DCS settings (TX-DCS) --- Menu 18

When the transceiver is standby, press the **MENU** + **1STEP** **8WIN** keys and the screen will display 

Press the **MENU** key to access the menu, and after pressing the **▲** / **▼** key to select the DCS you desire, press the **MENU** key to confirm, and press the **EXIT** key to return to standby.

DCS: 105 groups of positive code, 105 groups of negative codes, ranging from D023N to D754I.

OFF: Deactive.

CTCSS									
1	67.0	11	94.8	21	131.8	31	171.3	41	203.5
2	69.3	12	97.4	22	136.5	32	173.8	42	206.5
3	71.9	13	100.0	23	141.3	33	177.3	43	210.7
4	74.4	14	103.5	24	146.2	34	179.9	44	218.1
5	77.0	15	107.2	25	151.4	35	183.5	45	225.7
6	79.7	16	110.9	26	156.7	36	186.2	46	229.1
7	82.5	17	114.8	27	159.8	37	189.9	47	233.6
8	85.4	18	118.8	28	162.2	38	192.8	48	241.8
9	88.5	19	123.0	29	165.5	39	196.6	49	250.3
10	91.5	20	127.3	30	167.9	40	199.5	50	254.1

DCS (positive code)

1	D023N	16	D074N	31	D165N	46	D261N	61	D356N	76	D462N	91	D627N
2	D025N	17	D114N	32	D172N	47	D263N	62	D364N	77	D464N	92	D631N
3	D026N	18	D115N	33	D174N	48	D265N	63	D365N	78	D465N	93	D632N
4	D031N	19	D116N	34	D205N	49	D266N	64	D371N	79	D466N	94	D645N
5	D032N	20	D122N	35	D212N	50	D271N	65	D411N	80	D503N	95	D654N
6	D036N	21	D125N	36	D223N	51	D274N	66	D412N	81	D506N	96	D662N
7	D043N	22	D131N	37	D225N	52	D306N	67	D413N	82	D516N	97	D664N
8	D047N	23	D132N	38	D226N	53	D311N	68	D423N	83	D523N	98	D703N
9	D051N	24	D134N	39	D243N	54	D315N	69	D431N	84	D526N	99	D712N
10	D053N	25	D143N	40	D244N	55	D325N	70	D432N	85	D532N	100	D723N
11	D054N	26	D145N	41	D245N	56	D331N	71	D445N	86	D546N	101	D731N
12	D065N	27	D152N	42	D246N	57	D332N	72	D446N	87	D565N	102	D732N
13	D071N	28	D155N	43	D251N	58	D343N	73	D452N	88	D606N	103	D734N
14	D072N	29	D156N	44	D252N	59	D346N	74	D454N	89	D612N	104	D743N
15	D073N	30	D162N	45	D255N	60	D351N	75	D455N	90	D624N	105	D754N

CALL/VFTX on Side Key 1 (PF1-KEY) --- MENU 19

In standby, press **MENU** + **1STEP** **9VOICE** the screen displays 

Press **MENU** to access the menu, press **▲** / **▼** to select the mode you desire. And then press **MENU** to confirm, and press **EXIT** to return to standby.

Two options: CALL(Selective Calls) and VFTX (Transmission on Sub-frequency).

Selective call codes are programmed via **wouxun** supplied software.

SCAN/LAMP/SOS/TeleAlarm/RADIO/DISABLE on Side Key 3 (PF3-KEY) --- MENU 20

In standby, press **MENU** + **2SQL** **0** the screen displays 

Press **MENU** to access the menu, press **▲** / **▼** to select the function you desire. And then press **MENU** to confirm, press **EXIT** to return to standby.

Six options: SCAN,LAMP, SOS, TeleAlarm, RADIO and Disable.

Different operations according to different functions:

SCAN: Activate the scan function:

In standby, press PF3 to access scanning mode.(scan mode can be set via MENU 14-Scan Mode Setting), while press any key to stop scanning.

LAMP: Activate lamp function:

In standby, press PF3 to activate lamp function, while press PF3 again to deactivate.

SOS-CH function

In standby, press **MENU** PF3, the speaker will prompt alarm after 2 seconds, and the radio will transmit alarm tone.

NOTE

» Each alarm lasts 10seconds, and after 5 minutes, the alarm will re-activate. Press any key to exit the function.



TeleAlarm: Activate remote alarm function

In standby, press PF3, the speaker will prompt alarm and transmit ANI ID code +numbers "110".

Press PTT key to exit.



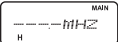
RADIO: Activate the FM radio function

A. Activate FM radio:

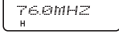In standby, press PF3 to activate FM radio. The screen displays  , press  to access FM radio function to automatically search FM radio. The search will automatically stop when receiving FM radio.

FM radio will be received on the searched frequency.

B. Inputting FM radio Frequency

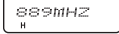In FM radio mode, press PF3, the screen display  , hold on  for 2 seconds, the screen displays  .It is OK to input the FM radio frequency.

C. Exit FM radio

Press PF3 again to exit FM radio function.

NOTE

» When FM radio is active, current frequency or channel is still in standby. After receiving the signals, the transceiver returns to transceiver communication mode. After the signal disappears for 5seconds, the transceiver returns to FM radio. After 5seconds when pressing PTT key to transmit, the transceiver returns to FM radio automatically.

Working Mode Switch (CH-MDF) --- MENU 21

In standby, press  +   , the screen display  Press  to enter, press  /  , to select mode then press  confirm , press  it return to standby.

This transceiver has two options for the working mode:

1. Frequency mode(FREQ)
2. Channel mode

There are three channel display selections in channel mode as follows;

- ① Channel (CH)
- ② Frequency+ Channel number (CH FREQ)
- ③ Channel name (NAME)

How to operate

NOTE

- » The password for the work mode switch is programmed only via the programming software.
- » The password is consist of 6 characters, while "000000" means no password needed for the mode switch.

Auto Backlight (ABR) --- MENU 22

In standby , press **MENU** + **2 SQL** **2 SQL** , the screen display 

Press **MENU** to enter, press **▲** / **▼** to select backlight function , then press **MENU** confirm , press **EXIT** it return to standby.

Always Activate

1S-20S: Set the lasting time of backlight

Offset Frequency (OFF-SET) --- MENU 23

In standby, press **MENU** + **2 SQL** **3 SAVE** and the screen display 

Press **MENU** to access the menu,press **▲** / **▼** to select the parameter you desire, and then press **MENU** to confirm, press **EXIT** to return to standby.

Offset frequency range:0-599.995MHz, The 7th and 8th frequency point depends on the programmed step frequency.

Frequency Shift Direction (SFT-D) --- MENU 24

In standby, press **MENU** + **2 SQL** **4 TXP** , The screen display 

Press **MENU** to enter, press **▲** / **▼** to select the desired frequency shift direction, then press **MENU** confirm, press **EXIT** it return to standby.

There are three selections for the frequency shift direction setting:

1. Plus shift (+), which means that the transmitting frequency is higher than the receiving frequency.
2. Minus shift (-), which means that the transmitting frequency is lower than the receiving frequency.
3. Turn off this function

NOTE

- » When offset frequency is out of the allowed offset frequency range, the transceiver can not transmit. In this case, please make sure the offset frequency and receiving frequency is within the allowed range.

Stopwatch Timer (SECOND) --- MENU 25

In standby, press **MENU** + **2 SQL** **5 STOP** , The screen display 

Press **MENU** to enter, **▲** / **▼** to select ON/OFF , then press **MENU** confirm, press **EXIT** to standby.

Using the stopwatch timer:

How to Operate


When this function is ON, press **#LOCK** to start counting, while press any key to stop working. Press **#LOCK** again to re-start counting.

NOTE

» Press any key (except **#LOCK**) when the stopwatch stops working to exit the stopwatch function.

Editing a Channel Name (CH-NAME) --- MENU 26

Channel names can only be edited in channel mode, and only the name of the present channel can be edited this operation is ineffective in frequency mode.

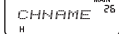
In standby, press **MENU** + **2 SQL** **6 TOT** keys and the screen will display 

Press **MENU** to access the menu, and the first digit will flash (which indicates that this digit is being edited). Press **▲** to choose the required character, press **▼** to edit the next character, press **MENU** to confirm, and then press **EXIT** to return to standby.

NOTE

- » 1.Channel names can be maximum of 8 characters long.
- » 2.When all 8 characters are empty, the channel will be displayed on the screen as "NO-NAME!"

Memorize Channel (MEM-CH) --- MENU 27

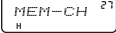In channel mode or standby, press **MENU** + **2 SQL** **7 VOX**, the screen displays 

Press **MENU** to access the menu, press **▲** / **▼** to select the desired channel order, and then press **MENU** to memorize with a voice prompt. Press **EXIT** to return to standby.

When the transceiver is in channel(MR) mode, the parameters(except channel name and scan adding) will be memorized into the channel.

When the transceiver is in frequency(VFO) mode, you can program all the parameters(frequency, offset, offset directions etc.) into the channel to memorize.

Example:

Memorize the parameters: "Receiving frequency 450.025MHz, receiving CTCSS is 67.0Hz, transmission frequency is 460.025MHz" into the Channel NO.10.

- 1.Inputting 450.025MHz to the transceiver in frequency(VFO)mode, press **MENU** + **1STEP** **5 ROGER** to access receiving CTCSS/DCS setting, press **▲** / **▼** to select 67.0Hz, press **MENU** to confirm.
- 2.Press **MENU** + **2 SQL** **3 SAVE** to select the offset frequency is 10.000MHz, press **MENU** + **2 SQL** **4 TXP** to set the frequency direction as "+".
- 3.Press **MENU** + **2 SQL** **7 VOX** to access channel memory, select CH-010 and press **MENU** to memorize the channel

How to operate

and return to standby.



In standby, press **MENU** + **2 SQL** **7 VOX** to access channel memory, the screen displays , input the desired channel number orderly, and then press **MENU** to confirm.

NOTE

- » When the selected channel is empty (without any parameter), the characters of the channel number is blue, while the selected channel is with the memorized parameters, the characters of the channel number is dark red.

Deleting a channel (DEL-CH) --- MENU 28

In standby, press **MENU** + **2 SQL** **8 WIN**, the screen will display 

Press **MENU** to access the menu, press  /  to select the channel you wish to delete or manually inputting the channel number, press **MENU** to confirm and the **EXIT** key to return to standby.

Special Reminder

- » 1st channel can not be deleted.
- » When the selected channel is empty (without any parameter), the characters of the channel number is blue, while the selected channel is with the memorized parameters, the characters of the channel number is dark red.



CTCSS scanning (SCN-CTC) --- MENU 29

This function scan all the frequencies/channels which with CTCSS setting, in case to confirm if the transmitter transmits the CTCSS code. When your CTCSS code is not matching with the other member on your group, you can activate this function to confirm the CTCSS code.

In standby, press **MENU** + **2 SQL** **9 VOICE**, the screen displays 

Press **MENU** to access CTCSS scanning.

Special Reminder

- » When the current frequency or channel is not receiving any carrier wave signal, then it can not activate this CTCSS scanning function.
- » If you want to scan the frequencies or channels counterclockwise, then you can press  /  or rotate the channel knob to change the scanning direction.
- » When scanning CTCSS frequency, it will show on the screen, you can press **MENU** to save. If the scanned CTCSS is unwanted, then you can press *** SCAN** to continue scanning, until scans the one you wanted.

DCS scanning (SCN-DCS) --- MENU 30

This function scan all the frequencies/channels which with DCS setting, in case to confirm if the trans-

How to Operate

mitter transmits the DCS code. When your DCS code is not matching with the other member on your group, you can activate this function to confirm the DCS code.

In standby, press **MENU** + **3 SAVE 0**, the screen displays

Press **MENU** to access DCS scanning.

Special Reminder

- » When the current frequency or channel is not receiving any carrier wave signal, then it can not activate this DCS scanning function.
- » If you want to scan the frequencies or channels counterclockwise, then you can press **▲** / **▼** or rotate the channel knob to change the scanning direction.

Mute settings (SP-MUTE) --- MENU 31

In standby, press **MENU** + **3 SAVE 1STEP**, the screen displays

Press **MENU** to access the menu, and after pressing **▲** / **▼** to choose the required mute mode, press **MENU** to confirm, and press **EXIT** to return to standby.

Squelch settings: set the conditions which determine when the speaker shall be turned on, these settings are used during selective calls, group calls and all calls.

The transceiver's mute mode include:

QT: When the transceiver is set to this mode, all signals on the same QT frequency will activate the speaker.

QT+DTMF: only those signals which both satisfy the requirements of QT and whose DTMF carrier wave signal also match the transceiver will activate the speaker in this mode.

QT*DTMF: When this mode is active, only those signals which either meet QT requirements or DTMF requirements will activate the speaker.

Caller ID Code Switch (ANI-SW) --- MENU 32

In frequency mode, press **MENU** + **3 SAVE 2SQL**, The screen display

Press **MENU** to enter, press **▲** / **▼** to select turn ON/OFF, and press **MENU** to confirm, press **EXIT** it return to standby.

Editing Caller ID Code (ANI-EDIT) --- MENU 33

The transceiver's Caller ID code is composed of the arabic numerals 0-9: the first digit cannot be 0, and ID numbers can be as short as 3 digits and as long as 6.

In standby, press **MENU** + **3 SAVE 3SAVE**, the screen displays

Press **MENU** to access the menu, and after inputting the required numbers, press **MENU** to confirm, and **EXIT** key to return to standby.

How to Operate

Example 1: editing a 6-digit ANI ID code(123456).

In standby, press **MENU** + **3 SAVE** **3 SAVE** , the screen displays 

After pressing **MENU** key, the first digit will flash, then input the required value 123456.

Press **MENU** to confirm, and press **EXIT** to return to standby.

Example 2: editing a 3-digit Caller ID code(123)

In standby, press **MENU** + **3 SAVE** **3 SAVE** , the screen displays 

After pressing **MENU** , if a Caller ID code has been already input, it will be displayed, and the first digit will flash. If no Caller ID code has been input, 101 will be displayed, and the first digit will flash. Input 123 at the same time, press **MENU** to confirm, press **EXIT** to return to standby.

Special Reminder

» Each transceiver can have only one ANI ID code, which is shared by Area A and B.

DTMF Sidetone (DTMF-ST) --- MENU 34

In frequency mode, press **MENU** + **3 SAVE** **4 TPK** , The screen display 

Press **MENU** to enter, press **▲** / **▼** to select the required sidetone mode, and press **MENU** to confirm, press **EXIT** it return to standby.

The transceiver has the following DTMF modes: 1. DT-ST: Keypad sidetone will be activated when tran-

smitting; 2. ANI-ST: ANI ID code sidetone will be activated when transmitting; 3. DT+ANI: keypad and caller ID sidetone are both activated when transmitting. OFF: Deactivate sidetone function.

Keypad Autolock (AUTOLOCK) --- MENU 35

In standby, press **MENU** + **3 SAVE** **5 ROGER** , the screen displays 

Press **MENU** to access the menu, press **▲** / **▼** to select ON(Activate)/OFF(Deactivate), and then press **MENU** to confirm, press **EXIT** to return to standby.

After activating keypad autolock function, the keypad will be locked automatically without any operation in 15seconds. Hold on **#LOCK** for 2seconds to unlock the keypad.

NOTE

» Manually lock: In standby, hold on **#LOCK** for 2seconds to lock the keypad, hold on **#LOCK** for 2 seconds again to unlock the keypad.

Priority Channel Switch (PRI CH-SW) --- MENU 36

 
In standby, press **MENU** + **3 SAVE** **6 TOT** , the screen display 

Press **MENU** to access, press **▲** / **▼** to select ON/OFF. And then press **MENU** to confirm, and press **EXIT** to return to standby

How to Operate

If you want to monitor the other frequency and check the certain preferred frequency at the same time, you can set priority scan function.

E.g.: Scan six channels. Set CH1, CH2, CH3, and CH4 and CH5 as the common scanned channels and CH6 as the priority scanned channels. Then the scanning order is as followings:



When this transceiver detects signal on the priority channel during scanning, it will on its frequency. Please program the priority channel via KG-UV8D programming software.

Repeater Setting (RPT-SET) --- MENU 37

This transceiver has 2 repeater setting available:

- 1.X-DIRPT:Directional cross-band repeater mode
- 2.X-TWRPT:Two way cross-band repeater mode

Special Reminder

» In cross-band repeater mode, if the channel or frequency set the reverse frequency, offset frequency, or offset direction, its transmitting frequency would out of the transceiver's frequency, then it will not transmit.

Master frequency and sub frequency for repeater should be on different bands. (For example, master frequency is programmed on VHF band, and the sub frequency should be programmed on UHF band, and vice versa.)

X-DIRPT (Directional cross-band repeater): The master VFO's receiving frequency is the cross-band receiver's receiving frequency, and the sub VFO's transmitting frequency is the cross-band transmitter's transmitting frequency.

X-TWRPT (Two way cross-band repeater): In standby, both the master and secondary VFO's are receivers, whichever VFO receives an effective carrier-wave signal, the other VFO will be the transmitter and start transmitting. The transmitter and receiver is unfixed under two way cross-band repeater mode. The first received VFO is receiver and relatively the other one is transmitter.

After accessing cross-band repeater mode, the operation of receiving /transmission frequencies, CTCSS/DCS encoding& decoding are the same as the transceiver is in transceiver

How to Operate

communication mode.

Example:

A. Before accessing cross-band repeater mode, A area is in channel mode. The receiving frequency and CTCSS/DCS in cross-band repeater mode are the same with the channel in standby.

After B area receives the effective signal, A area starts transmission. The transmitting frequency and CTCSS/DCS in cross-band repeater mode are the same with the channel in A area.

If setting reverse frequency function, the transmission&receiving frequencies and CTCSS/DCS will be reverted.




B. Before accessing cross-band repeater mode, A area is in frequency mode. The receiving frequency and CTCSS/DCS in cross-band repeater mode are the same with the setting in standby.

After B area receives the effective signal, A area starts transmission. The receiving frequency and CTCSS/DCS in cross-band repeater mode are the same with the channel in A area.





If setting reverse frequency function, the transmission&receiving frequencies and CTCSS/DCS will be reverted.

To select if you will open speaker for the receiver in cross-band repeater via MENU38 (RPT-SPK), and if you would like to hold on PTT key to transmit in repeater mode via MENU39 (RPT-PTT). But if you press PTT key to transmit, the transceiver exits the repeater mode temporarily.

In standby, press  +   the screen displays 

Press , press  /  to select the mode you desire, and then press  again.

Special Reminder

- » In cross-band repeater mode, the screen will display .
- » Switching transceiver communication and repeater modes via . In standby, hold on  for 2 seconds to switch the modes.
- » In order to use the repeating well, there is the Repeating Receipt Tone which is set by MENU 47. The repeating receipt tone timely and effectively reports the working status and increases the efficiency of repeating.
- » The Repeating Hold Timer is used for avoiding to press or release PTT too frequently in order to read out the message. When the receiver was released PTT, the hold time is able for the equipment keeping transmitting for a while during waiting for response. If there is no efficient QT/DQT detected within the hold time, then the transmitter will release PTT. The repeating hold timer is setting the hold time for the transmitter to keep transmitting after the QT/QDT receiving signal disappears. The function is programmable by  supplied software.

Repeater Speaker (RPT-SPK) --- MENU 38

In standby, press **MENU** + **3 SAVE** **8 WIN**, the screen display

Press **MENU** to access, press **▲** / **▼** to select ON/OFF. And then press **MENU** to confirm, and press **EXIT** to return to standby.

Repeater PTT (RPT-PTT) --- MENU 39

In standby, press **MENU** + **3 SAVE** **9 VOICE**, the screen display

Press **MENU** to access, press **▲** / **▼** to select ON/OFF. And then press **MENU** to confirm, and press **EXIT** to return to standby.

Scan Add (SCAN-ADD) --- MENU 40

This function means whether a channel in scanning when in the startup channel scanning, so the function can be set only in the channel mode under the current channel, is invalid in frequency mode.

In standby, press **MENU** + **4 TXP** **0**, the screen display

Press **MENU** to access, press **▲** / **▼** to select ON/OFF. And then press **MENU** to confirm, and press **EXIT** to return to standby.

Note: The function is invalid in cross-band repeater or repeater/transmitter mode.

Single-Tone Pulse Frequency (ALERT) --- MENU 41

Some of the relay systems used for single-tone pulse transmission need a single-tone pulse signal to activate, if a repeater is already active, however, this signal is not needed. The following pulse signal frequencies can be selected: 1750Hz, 2100Hz, 1000Hz and 1450Hz.

In standby, press **MENU** + **4 TXP** **1 STEP**, the screen displays

Press **MENU** to access, press **▲** / **▼** to select the parameter you desire and then press **MENU** to confirm, press **EXIT** to return to standby.

In transmission mode, press PF2 to transmit the selected single-tone pulse frequency.

Caller ID Code Transmitting Delay (PTT-DLY) --- MENU 42

In standby, press **MENU** + **4 TXP** **2 SQL**, the screen display

Press **MENU** to access, press **▲** / **▼** to select the time you want. And then press **MENU** to confirm, and press **EXIT** to return to standby.

This delay time can be set 100~3000ms, total 30 levels with 100ms each.

Caller ID Transmission Mode (PTT-ID) --- MENU 43

In standby, press **MENU** + **4 TXP** **3 SAVE**, the screen display

How to Operate

Press **MENU** to access, press **▲** / **▼** to select the mode you want. And then press **MENU** to confirm, and press **EXIT** to return to standby.

This can be set three methods, BOT (begin), EOT (end), BOTH (begin /end).

Ring Time --- MENU 44

In standby, press **MENU** + **4** **TXP** **4** **TXP**, the screen display 

Press **MENU** to access, press **▲** / **▼** to select the parameter you want. And then press **MENU** to confirm, and press **EXIT** to return to standby.

This ring time can be set 10 seconds, total 10 levels with 1 second. OFF:Deactivate the function.

Scan group A setting (SCG-A) --- MENU 45

The scan group settings are the way that a transceiver can divide the programming channels into different scan groups. It will scan all channels in Group A.

Scan group settings are: ALL channel, as well as 1-10 individual scanning groups.

In standby, press **MENU** + **4** **TXP** **5** **ROSC**, the screen displays 

Press **▲** / **▼** to press **MENU** to confirm, press **EXIT** to return.

Note:Scanning group A setting is active in A area.

Scan Group B Setting (SCG-A) --- MENU 46

The scan group settings are the way that a transceiver can divide the programming channels into different scan groups. It will scan all channels in Group B.

Scan group settings are: ALL channel, as well as 1-10 individual scanning groups.

In standby, press **MENU** + **4** **TXP** **6** **TOT**, the screen displays 

Press **▲** / **▼** to press **MENU** to confirm, press **EXIT** to return.

Note:Scanning group B setting is active in B area.

Repeater Tone Setting (RPT-TONE) --- MENU 47

In standby, press **MENU** + **4** **TXP** **7** **VOX**, the screen display 

Press **MENU** to access, press **▲** / **▼** to select the parameter,. And then press **MENU** to confirm, and press **EXIT** to return to standby.

ON: Activate the function

OFF: Deactivate the function

Saving Scanned CTCSS/DCS (SC-QT) --- MENU 48

When the transceiver is in CTCSS/DCS scanning, there are 3 saving types to save the detected CTCSS/

How to Operate

DCS from the others to your transceiver:

1. Save as your transceivers decoder and encoder(ALL).
2. Save as your transceiver encoder(ENCODER)
3. Save as your transceiver decoder(DECODER)

When the transceiver is in standby, press **MENU** + **4 TX** **8 WIN** keys and the screen will display . Press **▲** / **▼** press **MENU** , and then press **EXIT** .

Mute Setting on Sub-frequency --- MENU 49

Mute function is very practical, especially when the transceiver is in dual receiving mode.

In standby, press **MENU** + **4 TX** **9 VOICE** , the screen displays .

Press **MENU** to access and then press **▲** / **▼** to select the parameter you desire, and then press **MENU** to confirm.

OFF: Deactivate the function

TX: Transmission on master frequency, the receiving volume of sub-frequency is off.


RX: Receiving on master frequency, the receiving volume of sub-frequency is off.

TX/RX: Both receiving and transmission on master frequency, the receiving volume of sub-frequency is off.

Selective Call Code Group Setting (CALLCODE) --- MENU 50

In standby, press **MENU** + **5 ROGER** **0** , the screen displays .

Press **MENU** to access the menu, press **▲** / **▼** to select the desired selective call group number. Press **MENU** to confirm, and the transceiver returns to standby.

Selective call code are with 1-20 groups for option. Selective call codes are programmed via  supplied software.

Reset setting (Reset) --- MENU 51

Functional Parameter Reset(VFO): resets all functional settings to factory default values, but channel parameters are not reset.

Total Parameter Reset(ALL): resets all of the transceiver's functional settings and channel parameters to factory values.

In standby, press **MENU** + **5 ROGER** **1STEP** , the screen displays .

Press **MENU** to access, press **▲** / **▼** to select the parameter you desire and then press **MENU** to confirm.

The screen will display .

After the transceiver resets(VFO/ALL), it will restart and return to standby mode.

Detailed Instruction for Some Important Functions

All calls, Group calls and Selective calls


There are Caller ID code transmission, Caller ID code edit and DTMF decoding functions. Without the assistance of the other communication equipments, the all calls, group calls and selective calls are available between the groups.

Before using all calls, group calls and selective calls function, you need to set as followings:

1. Caller ID CODE edit

Each transceiver in the same group should be edited a unique ANI ID code.


Caller ID CODE: ID -- XXX(3 digits) ID -- XXXX(4 digits) ID--XXXXX(5 digits) ID-- XXXXXX(6digits)

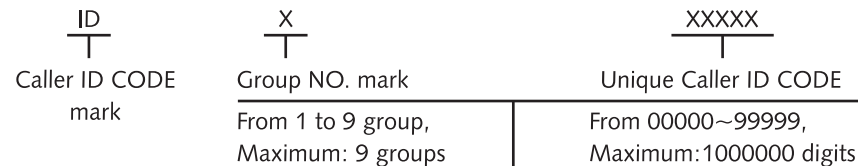

This is how to set Caller ID CODE.

NOTE: Caller ID Codes should be different for the transceivers in the same group.

Steps are as followings:

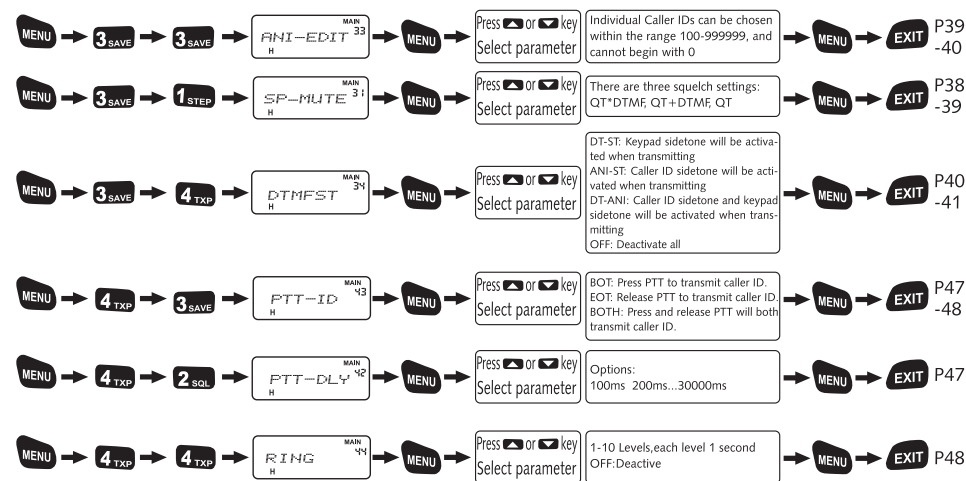

NOTE

» Any transceiver in the same group should be with the same frequency point and parameter.

Detailed Instruction for Some Important Functions

a. How to use all calls function:

Hold on PTT key to transmit. After transmitting Caller ID Code, input *SCAN + #LOCK keys directly.

b. How to use group calls function:

Hold on PTT key to transmit. After transmitting Caller ID Code, input "Group NO." *SCAN + #LOCK

c. How to use selective calls function:

Hold on PTT key to transmit. After transmitting Caller ID Code, input the Caller ID Code of the selective transceiver that you want to speak to.

Note: Selective call is available via selective call key. Selective call code is programmed via Wouxun supplied software. Programming the same selective call code of the selective transceiver and Caller ID code of the selected transceiver.

For example, Caller ID Code for the selected transceiver is 123456, selective call code for the selective transceiver should be 123456 too.

Repeater Usage

1. Repeater PTT Switch (RPT-PTT)

When the transceiver is in standby, press MENU + 3 SAVE 9 VOICE keys and the screen displays 

Press MENU to access the settings, and after pressing the ▲ / ▼ keys to activate (ON) the PTT trans-


mission, Press MENU to confirm, and press the EXIT key to return to standby.

2. Repeater speaker switch (RPT-SPK)

When the transceiver is in standby, press MENU + 3 SAVE 8 WIN keys and the screen will display 

Press MENU to access the settings, and after pressing ▲ / ▼ to activate (ON) the speaker, press MENU to confirm, and press EXIT key to return to standby.

3. Repeater Setting (RPT-SET)

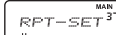Accessing cross-band repeater mode: when the transceiver is in standby, press MENU + 3 SAVE 7 VOX and the screen will display 

Press MENU to access, press ▲ / ▼ to select two-way cross-band repeater mode (X-TWRPT) or directional cross-band repeater mode (X-DIRPT). Press MENU to confirm. And then press EXIT to return to standby mode, hold on RPT key for 2seconds, the transceiver is to access cross-band repeater.

Exit Cross-Band Repeater: In standby, hold RPT for 2seconds, the transceiver exit the cross-band repeater mode and access transceiver communication mode.

(1) When "RPT-PTT" is ON, pressing PTT to stop receiving or transmission in cross-band repeater mode.

The transmission frequency is the frequency of the master band, release PTT key to access Two-way

Detailed Instruction for Some Important Functions

cross-band repeater mode.


(2) When "RPT-SPK" is ON, any transceiver in cross-band repeater mode can receive the effective signals, and then the repeater receipt tone will be heard.

(3) The difference between directional cross-band repeater and two-way cross-band repeater modes is the transmitter and receiver is unfixed under two way cross-band repeater mode.


Directional cross-band repeater: The master frequency area A is the receiving frequency of the receiver in cross-band repeater mode, the sub-frequency area B is the transmitting frequency.

Two-way cross-band repeater mode: In standby, both master and sub areas are receivers, whichever area receives an effective carrier wave signal, the other area will be the transmitter and start transmitting.


Optional Accessories

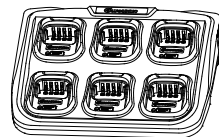

Six-way Charger

 


Car Charger

 

Programming Software



Eliminator

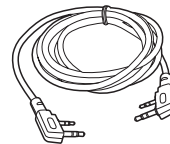

Wireclone Cable



Headset



MIC/Speaker



(SL16) (BNC)

Antenna Adaptor


Troubleshooting

Before assuming your transceiver is broken, please check your transceiver according to the following table; if the problem persists, you can reset the transceiver, which sometimes.

Fault	Solution
Reception prompt remains but speaker is silent	<ul style="list-style-type: none">» Check that the volume knob has been set to maximum.» Please reset CTCSS/DCS to check whether different channels from other group members have been set.» Check whether mute settings are correct.
Keypad is unresponsive	<ul style="list-style-type: none">» Check whether keypad has been locked.» Check whether other keys have been pressed.
Other voices (not from group members) appear in the channel.	<ul style="list-style-type: none">» Please change the CTCSS / DCS code.
In standby, automatic transmission without pressing PTT key	<ul style="list-style-type: none">» Please check if VOX function is active or VOX level is too low.

Fault	Solution
Can not enter scanning mode	<ul style="list-style-type: none">» Please see if the scan group channel, Scan Add function is turned on.
Cannot set up the cross-band repeater	<ul style="list-style-type: none">» Please make sure A/B area is on the cross-band repeaters operating frequency.
Cannot transmit in repeat mode	<ul style="list-style-type: none">» Please check to see if the receivers squelch and CTCSS / DCS settings are correct.

Announcement

 **Wouxun** endeavors to achieve the accuracy and completeness of this manual, but it is still not perfect for any possible omissions or printing errors. All the above is subject to be updated without prior notice.

English Version: KG-UV8D-0311-V1

DECLARATION OF CONFORMITY

We, Quanzhou Wouxun Electronics Co.,Ltd,
No.928 Nanhuan Road,Jiangnan High Technology Industry Park,Quanzhou,
Fujian 362000,China,

declare that our product:

Product Description: Two-way Radio
Brand: WOUXUN
Model: KG-UV8D

is in compliance with the essential requirements and other relevant provisions of the R&TTE directive 1999/5/EC and carries the CE mark accordingly.
Supplementary information:

The product complies with the requirements of:

Low Voltage Directive 2006/95/EC
-EN 60950-1: 2006+A11: 2009+A1: 2010+A12: 2011

Efficient use of frequency spectrum
-EN 301 783-1 V1.2.1 (2010-07)
-EN 301 783-2 V1.2.1 (2010-07)

EMC Directive 2004/108/EC
-EN 301 489-1 V1.9.2 (2011-09)
-EN 301 489-15 V1.2.1 (2002-08)

Date: March 16, 2014
Place: Quanzhou,Fujian,China
Name: Danny Chen

Quanzhou Wouxun Electronics Co.,Ltd.
Add:No.928 Nanhuan Road,Jiangnan High Technology Industry
Park,Quanzhou,Fujian 362000,China
Tel:+86 595 28051265 Fax:+86 595 28051267
Http://www.wouxun.com

MEMO

MEMO
